

GMA 347 AUDIO PANEL INSTALLATION MANUAL



Garmin Ltd. or its subsidiaries

190-00325-01 Revision A
August 2005

© Copyright 2005
Garmin Ltd. or its subsidiaries
All Rights Reserved

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin International, Inc.
1200 E. 151st Street
Olathe, KS 66062 USA
Telephone: 913-397-8200

www.garmin.com

Garmin (Europe) Ltd.
Unit 5, The Quadrangle, Abbey Park Industrial Estate
Romsey, SO51 9DL, U.K.
Telephone: 44/0870.851241

RECORD OF REVISIONS

| Revision | Revision Date | Description | ECO # |
|-----------------|----------------------|--------------------|--------------|
| A | 8/24/05 | Initial Release | 33101 |
| | | | |
| | | | |
| | | | |

DOCUMENT PAGINATION

| Section | Page Range |
|-------------------|-------------------|
| Table of Contents | i-viii |
| Section 1 | 1-1 – 1-6 |
| Section 2 | 2-1 – 2-8 |
| Section 3 | 3-1 – 3-14 |
| Section 4 | 4-1 – 4-14 |
| Section 5 | 5-1 – 5-10 |
| Appendix A | A-1-A-6 |
| Appendix B | B-1-B-6 |
| Appendix C | C-1-C-24 |

NOTE

At the time of this edition, the current software version for the GMA 347 is 2.09. The software version and information in this document are subject to change without notice. Visit the Garmin web site (www.garmin.com) for current manual updates and supplemental information concerning the operation of this and other Garmin products.

INFORMATION SUBJECT TO EXPORT CONTROL LAWS

This document may contain information which is subject to the Export Administration Regulations ("EAR") issued by the United States Department of Commerce (15 CFR, Chapter VII, Subchapter C) and which may not be exported, released, or disclosed to foreign nationals inside or outside of the United States without first obtaining an export license. A violation of the EAR may be subject to a penalty of up to 10 years imprisonment and a fine of up to US \$1,000,000 under Section 2410 of the Export Administration Act of 1979. Include this notice with any reproduced portion of this document.

WARNING

This product, its packaging, and its components contain chemicals known to the state of California to cause cancer, birth defects, or reproductive harm. This notice is being provided in accordance with California's proposition 65. If you have any questions or would like additional information, please refer to our web site at www.garmin.com/prop65.

This page intentionally left blank

TABLE OF CONTENTS

| PARAGRAPH | PAGE |
|--|------|
| 1 GENERAL DESCRIPTION | 1-1 |
| 1.1 Introduction..... | 1-1 |
| 1.2 Equipment Description | 1-1 |
| 1.3 Technical Specifications | 1-3 |
| 1.4 Certification | 1-5 |
| 1.5 Reference Documents | 1-6 |
| 1.6 Limited Warranty..... | 1-6 |
| | |
| 2 INSTALLATION OVERVIEW | 2-1 |
| 2.1 Introduction..... | 2-1 |
| 2.2 Wiring..... | 2-1 |
| 2.3 Cooling Air | 2-1 |
| 2.4 Installation Materials | 2-2 |
| 2.5 GMA 347 Wiring and Software Configuration Options..... | 2-3 |
| 2.6 Marker Beacon Antenna Installation | 2-5 |
| 2.7 Installation Approval Considerations for Pressurized Aircraft..... | 2-6 |
| 2.8 Electrical Noise..... | 2-6 |
| 2.9 GMA 347 Mounting | 2-7 |
| | |
| 3 INSTALLATION PROCEDURE..... | 3-1 |
| 3.1 Unpacking Unit..... | 3-1 |
| 3.2 Marker Beacon Antenna Installation | 3-1 |
| 3.3 Marker Beacon Antenna Cable Connectors..... | 3-1 |
| 3.4 Electrical Connections | 3-1 |
| 3.5 Backshell Assembly and D-Subminiature Connectors | 3-3 |
| 3.6 Circuit Breaker Placard..... | 3-11 |
| 3.7 GMA 347 Unit Installation..... | 3-11 |
| 3.8 Post Installation Configuration and Checkout..... | 3-11 |
| | |
| 4 SYSTEM INTERCONNECTS..... | 4-1 |
| 4.1 Connector Description | 4-1 |
| 4.2 Connectors J3471 and J3472 | 4-1 |
| 4.3 J3472 Connector Pin Assignments | 4-6 |
| 4.4 J3471 Connector Pin Assignments | 4-10 |

TABLE OF CONTENTS

| PARAGRAPH | PAGE |
|--|------|
| 5 POST INSTALLATION CONFIGURATION AND CHECKOUT PROCEDURE | 5-1 |
| 5.1 Post Installation Configuration Harness | 5-1 |
| 5.2 Program Information..... | 5-1 |
| 5.3 GMA Configuration Tool Version | 5-1 |
| 5.4 GMA Configuration Tool Introduction | 5-1 |
| 5.5 Connect and Disconnect Buttons..... | 5-2 |
| 5.6 Configuration Tool Settings | 5-4 |
| 5.7 Marker Beacon..... | 5-5 |
| 5.8 Keypad Annunciators | 5-5 |
| 5.9 Configuration Inputs..... | 5-5 |
| 5.10 Code Upload | 5-6 |
| 5.11 Configuration Example..... | 5-9 |
| 5.12 Valid Data Ranges | 5-10 |

APPENDIX A CERTIFICATION DOCUMENTS

| | |
|--|-----|
| A.1 Airworthiness Approval..... | A-1 |
| A.2 Continued Airworthiness | A-1 |
| A.3 Environmental Qualification Forms, GMA 347 Audio Panel | A-3 |

APPENDIX B ASSEMBLY AND INSTALLATION DRAWINGS

APPENDIX C INTERCONNECT DRAWINGS

LIST OF ILLUSTRATIONS

| FIGURE | PAGE |
|---|------|
| 2-1 GMA 347 Unit Rack | 2-7 |
| 3-1 Shield Block Install onto Backshell Connector Assembly | 3-4 |
| 3-2 Shielded Cable Preparation..... | 3-5 |
| 3-3 Daisy Chain Method for Shield Termination..... | 3-8 |
| 3-4 Parallel Shield Termination | 3-8 |
| 3-5 Configuration Module Installation..... | 3-10 |
| 4-1 Back of Unit, Connector Location..... | 4-1 |
| 4-2 Rear Connectors J3471 and J3472, Viewed From Back of Unit | 4-1 |
| 4-3 GMA 347 Configuration Upload Connections..... | 4-7 |

LIST OF ILLUSTRATIONS

| FIGURE | PAGE |
|---|------|
| 5-1 About GMA Config Tool | 5-1 |
| 5-2 GMA Configuration Tool Screen | 5-2 |
| 5-3 Connecting to the GMA 347..... | 5-2 |
| 5-4 Radio Button Not Chosen and Upload Selected | 5-6 |
| 5-5 File Selection | 5-6 |
| 5-6 Wrong Hex File Selected (Selecting Boot Code for System Code Upload)..... | 5-6 |
| 5-7 Wrong Hex File Selected (Selecting System Code for System Code Upload)..... | 5-7 |
| 5-8 Erasing Flash | 5-7 |
| 5-9 Uploading Flash..... | 5-7 |
| 5-10 Canceling a Code Upload | 5-7 |
| 5-11 Code Upload Failed | 5-8 |
| 5-12 Code Upload Complete..... | 5-8 |
| | |
| A-1 GMA 347 Environmental Qualification Form | A-4 |
| B-1 GMA 347 Outline Drawing | B-1 |
| B-2 GMA 347 Rack Dimensions (115-00427-00)..... | B-3 |
| B-3 GMA 347 Connector/Rack Assembly Drawing | B-5 |
| | |
| C-1 GMA 347 Power, Antenna and Speaker Interconnect Wiring Diagram..... | C-1 |
| C-2 Mic and Phone Jack Connections, Interconnect Wiring Diagram | C-3 |
| C-3 Transceiver Analog Connections, Interconnect Wiring Diagram..... | C-5 |
| C-4 Discrete Lines, Interconnect Wiring Diagram | C-7 |
| C-5 GMA 340 to GMA 347 Comparison | C-9 |

LIST OF TABLES

| TABLE | PAGE |
|--|------|
| 3-1 Pin Contact Part Numbers..... | 3-1 |
| 3-2 Recommended Crimp Tools | 3-2 |
| 3-3 Backshell Assembly..... | 3-3 |
| 3-4 Shield Block Components | 3-4 |
| 3-5 Shielded Cable Preparation..... | 3-5 |
| 3-6 Configuration Module Kit – 011-00979-00..... | 3-9 |
| 3-7 Configuration Module Wire Color Reference Chart | 3-10 |
| 4-1 J3471 Pin Assignments..... | 4-2 |
| 4-2 J3472 Pin Assignments..... | 4-4 |
| 4-3 Aircraft Power Pin Assignments, J3472 | 4-6 |
| 4-4 Aircraft Lighting Pin Assignments, J3472..... | 4-6 |
| 4-5 RS-232 Pin Assignments, J3472..... | 4-7 |
| 4-6 Marker Beacon Pin Assignments, J3472 | 4-8 |
| 4-7 Installation Selection Inputs Pin Assignments, J3472 | 4-8 |
| 4-8 External Configuration Module Pin Assignments, J3472..... | 4-9 |
| 4-9 Speaker Pin Assignments, J3472 | 4-9 |
| 4-10 PA MUTE Pin Assignments, J3472 | 4-9 |
| 4-11 Mic Audio Inputs and Mic Key Pin Assignments, J3471..... | 4-10 |
| 4-12 ICS Key Pin Assignments, J3471 | 4-10 |
| 4-13 Com Audio and Mic Keys Pin Assignments, J3471 | 4-11 |
| 4-14 Nav Audio Pin Assignments, J3471 | 4-11 |
| 4-15 Headset Outputs Pin Assignments, J3471 | 4-11 |
| 4-16 Music Inputs Pin Assignments, J3471 | 4-12 |
| 4-17 Unswitched Audio Inputs Pin Assignments, J3471 | 4-12 |
| 4-18 Telephone Inputs/Outputs Pin Assignments, J3471 | 4-12 |
| 4-19 AUX, DME and ADF Audio Pin Assignments, J3471..... | 4-13 |
| 4-20 Failsafe Audio Pin Assignments, J3471 | 4-13 |

GMA 347 HARDWARE MOD LEVEL HISTORY

The following table identifies hardware modification (Mod) Levels for the GMA 347 Audio Panel. Mod Levels are listed with the associated service bulletin number, service bulletin date, and the purpose of the modification. The table is current at the time of publication of this manual (see date on front cover) and is subject to change without notice. Authorized Garmin Sales and Service Centers are encouraged to access the most up-to-date bulletin and advisory information on the Garmin Dealer Resource web site at www.garmin.com using their Garmin-provided user name and password.

| MOD LEVEL | SERVICE BULLETIN NUMBER | SERVICE BULLETIN DATE | PURPOSE OF MODIFICATION |
|------------------|--------------------------------|------------------------------|--------------------------------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

This page intentionally left blank

1 GENERAL DESCRIPTION

1.1 Introduction

This manual presents mechanical and electrical installation requirements for installing the Garmin GMA 347 Audio Panel. The GMA 347 can be installed into a variety of airframes by means of an STC, TC or Field Approval. Each airframe installation may vary. Use only approved data for specific installation instructions in a particular aircraft. After installation of the GMA 347, FAA Form 337 must be completed by an appropriately certificated agency to return the aircraft to service.

1.2 Equipment Description

| |
|----------------|
| CAUTION |
|----------------|

The operation of cellular telephones or other cellular mobile devices aboard aircraft while airborne is prohibited by FCC rules. Due to the potential for interference with onboard systems, the operation of cellular communication devices while onboard an aircraft that is on the ground is subject to (FAA) 14 CFR 91.21.

(FCC) 47 CFR 22.925 prohibits airborne operation of cellular telephones installed in or carried aboard aircraft. Cellular telephones must not be operated aboard any aircraft while the aircraft is off the ground. When any aircraft leaves the ground, all cellular telephones on board that aircraft must be turned off.

Cellular telephones that are on, even in a monitoring state, can disrupt GPS performance.

The Garmin GMA 347 is a horizontally oriented panel-mounted audio control panel and marker beacon system. The system delivers reliability and versatility for all audio controlling functions. LED-illuminated pushbuttons and logical panel layout allow audio selection of NAV, COM. LED annunciator brightness is adjusted to an appropriate level for ambient cockpit light conditions automatically by photocell dimming. Key brightness is controlled manually with the radio lighting dimming bus. A failsafe circuit connects the pilot's left headset channel and microphone directly to COM 1 in case power is interrupted or the unit is turned off.

The Garmin GMA 347 Audio Panel incorporates a microcontroller for processing front panel key commands, annunciator control, input/output functions, and communication.

The GMA 347 includes a six-position intercom system (ICS) with electronic cabin noise de-emphasis, two stereo music inputs, and combined pilot, copilot, and passenger volume controls. The intercom provides four selectable modes of isolation (All, Crew, Pilot, Copilot). A pilot-selectable cabin speaker output can be used to listen to the selected aircraft radios or to broadcast PA announcements. The PA function is pilot selectable.

The GMA 347 provides a digital voice recorder with playback capability. Recording is automatic when a COM signal is received. Playback is controlled by pressing the PLAY button or a remote mounted switch.

The Recorder can be disabled using an external switch. The digital recorder can playback up to two and a half minutes of recording. Refer to the GMA 347 Pilot's Guide (190-00325-00) for complete system operation.

The GMA 347 is FAA TSO approved to C50c and C35d Class A, and ETSO approved to C50c and 2C35d (pending). A marker beacon receiver with dual sensitivity and audio muting with automatic re-arming is included in the unit. Operating voltage range is from 11 to 33 volts.

The GMA 347 provides two stereo auxiliary entertainment inputs; MUSIC 1 and MUSIC 2. Two 3.5 mm stereo phone jacks should be installed in a convenient location for this purpose. These inputs are compatible with popular portable entertainment devices such as MP3 and CD players. The headphone outputs of these devices are plugged into the MUSIC 1 or MUSIC 2 jacks.

Only the pilot and copilot hear MUSIC 1. MUSIC 2 is a non-muted input heard only by the passengers. MUSIC 1 and MUSIC 2 characteristics are affected by the active intercom mode. Refer to the GMA 347 pilot's manual for details.

MUSIC 1 is soft-muted when an interruption occurs from an aircraft radio. Soft muting is the gradual return of MUSIC 1 to its original volume level. MUSIC 1 can also be configured to mute during ICS activity. MUSIC 2 is a non-muted input.

1.2.1 Features Summary

- Logical front panel layout
- LED annunciators indicate selected function
- Six position intercom: pilot, copilot, four passengers
- Three stereo headset amplifiers: one for pilot, one for copilot, and one for the passengers
- Two stereo music source inputs
- Four selectable intercom operational modes
- Independent pilot, copilot, and passenger volume control
- VOX control for mic inputs
- Automatic selection of radio audio source when corresponding mic is selected
- **MASQ**TM Processing
- Split COM transceiver function. Copilot may transmit and receive on COM 2 while pilot transmits and receives on COM 1
- COM swap function
- TX indication
- **SmartMute**TM marker audio muting
- Autosquelch
- Speaker output for radios or PA function
- Power-off fail safe connection for Pilot PTT, mic and Pilot's Headset-Left to COM 1
- Voice Recorder with Playback
- Configurable Options. See Sections 4 and 5 for connection and configuration details.

1.2.2 Interface Summary

The following is an interface summary for the GMA 347. See Section 4 and Appendix C for connection details.

- 3 Transceiver Inputs (Figure C-3)
- 5 Receiver Inputs (Figure C-3)
- 4 Unswitched Inputs (Figures C-3)
- 2 Aircraft Power Inputs (Figure C-1)
- Discrete Inputs/Outputs (Figure C-4)
- Marker Beacon Antenna Input (Figure C-1)
- External Marker Beacon Lamp Driver Outputs (Figure C-4)

1.3 Technical Specifications

The following tables present general environmental specifications. For detailed specifications, see the Environmental Qualification form in Appendix A.

1.3.1 Physical Characteristics

| Specification | Characteristic |
|---|----------------------|
| Bezel Height | 1.3 inches (33 mm) |
| Bezel Width | 6.29 inches (160 mm) |
| Rack Height | 1.325 (34 mm) |
| Rack Width | 6.30 inches (160 mm) |
| Depth Behind Panel with Connectors (measured from face of aircraft panel to rear of connector backshells) | 7.79 inches (198 mm) |
| GMA 347 Unit Weight | 1.7 lbs. (0.8 kg) |
| GMA 347 Rack Weight (Installed with rack and connectors) | 2.4 lbs. (1.1 kg) |

1.3.2 Electrical Characteristics

| Specification | Characteristic |
|------------------------|--|
| Regulatory Compliance | RTCA/DO-160D Environmental Conditions and EUROCAE/ED-14D |
| Unit Software | RTCA/DO-178B Level D |
| Temperature Range | -45°C to +70°C |
| Altitude | 55,000 Feet |
| Audio Panel | <p>Transceiver inputs: 3 Receiver inputs: 5 Unswitched inputs: 4 Input impedance: 500 Ω Input isolation: 60 dB minimum Special functions: Failsafe operation, MASQ™ processing Maximum Input: COM, NAV, DME, AUX, Failsafe, Unswitched inputs 1-3, Altitude Warning; 4 V rms TEL; 3.5 V rms</p> |
| Intercom | <p>Positions: 6 (pilot, copilot, 4 passengers) Volume controls: 2 (pilot, copilot/passengers) VOX level controls: 2 (pilot, copilot/passengers) VOX circuits: 6 (one per mic input) Music inputs (stereo): 2 (one input mutable) Music input impedance: 5 kΩ Music input level: Less than 500 mVac RMS for full output (typical). 1 Vac RMS MAX (3 Vac p-p) Microphone signal processing: 9 pole characteristic and special cabin noise band de-emphasis Intercom isolation modes: 4 (All, Pilot Isolate, Copilot Isolate, Crew Isolate) Special functions: Recorder with playback (automatic recording of selected COMs) up to 2.5 minutes of recording time. Automatic squelch: 6 (one per mic input) pilot selectable between auto and manual.</p> |
| Headphone Outputs | <p>Output amplifiers: 3, stereo (pilot, copilot, passengers) Fidelity: Power into 150 Ω Distortion 50 mW <0.5% 100 mW <5% Frequency response: music; 50 Hz to 20 kHz nominal Aircraft radio: 200 Hz to 6 kHz nominal ICS mic: (Special cabin noise band de-emphasis)</p> |
| Speaker Outputs | <p>Outputs selectable: 1, pilot selectable Output power: 10 watts into 4 Ω or 8 Ω, @ any normal supply voltage. Frequency response: 350 Hz to 6 kHz nominal Special functions: PA Mode, pilot selectable, including split operation</p> |
| Marker Beacon Receiver | <p>Frequency: Crystal controlled at 75 MHz Sensitivity: LO 1000 μV hard; HI 200 μV hard Selectivity: 6 dB @ ±10 kHz min, 40 dB @ ±200 kHz max. Input impedance: 50 Ω External lamp drive: 125 mA max each output Other outputs: Middle MKR sense Special functions: SmartMute™ marker audio muting</p> |

1.3.3 Power Requirements

| Characteristic | Specification |
|---------------------|---|
| Input Voltage Range | 11.0 to 33.0 Vdc. See the Environmental Qualification Form in Appendix A for details on surge ratings and minimum/maximum operating voltages. |
| Power Input | Operating Current: 3.75 amps max at 13.75 V 1.75 amps max at 27.5 V |

1.4 Certification

The conditions and tests required for TSO approval of this article are minimum performance standards. It is the responsibility of those installing this article either on or within a specific type or class of aircraft to determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in an aircraft. The article may be installed only if performed under 14 CFR part 43 or the applicable airworthiness requirements.

1.4.1 TSO/ETSO Compliance

The GMA 347 is FAA TSO approved to TSO-C50c, TSO-C35d Class A, ETSO-C50c (pending) and ETSO-2C35d (pending).

For a list of ETSO deviations see the GMA 347 Declaration of Design and Performance, Garmin part number 190-00325-03.

1.4.2 TSO Deviations

The following table provides a list of applicable TSO deviations for the GMA 347.

| TSO | Deviation |
|----------|---|
| TSO-C35d | Garmin was granted a deviation from TSO-C35d to use RTCA DO-160D instead of RTCA DO-138 as the standard for Environmental Conditions and Test Procedures for Airborne Equipment. |
| | Garmin was granted a deviation from TSO-C35d to use FAR §21.607(d) instead of FAR §37.7 as the general rules governing holders of the TSO authorizations. |
| TSO-C50d | Garmin was granted a deviation from TSO-C50d to use RTCA DO-178B instead of RTCA DO-178A as the standard for Software Considerations in Airborne Systems and Equipment Certification. |
| | Garmin was granted a deviation from TSO-C50d to use RTCA DO-160D instead of RTCA DO-160A as the standard for Environmental Conditions and Test Procedures for Airborne Equipment. |

1.5 Reference Documents

The following publications are sources of additional information for installing the GMA 347. Before installing the unit, the technician should read all referenced materials along with this manual.

| Part Number | Document |
|--------------|-----------------------|
| 190-00325-00 | GMA 347 Pilot's Guide |

1.6 Limited Warranty

This Garmin product is warranted to be free from defects in materials or workmanship for two years from the date of purchase. Within this period, Garmin will at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not cover failures due to abuse, misuse, accident or unauthorized alteration or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Garmin retains the exclusive right to repair or replace the unit or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin Authorized Service Center. For assistance in locating a Service Center near you, call Garmin Customer Service at one of the numbers shown below.

Products sold through online auctions are not eligible for rebates or other special offers from Garmin. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. Garmin will not replace missing components from any package purchased through an online auction.

Garmin International, Inc.
1200 East 151st Street
Olathe, Kansas 66062, U.S.A.
Phone: 913/397.8200
FAX: 913/397.0836

Garmin (Europe) Ltd.
Unit 5, The Quadrangle, Abbey Park Industrial Estate
Romsey, SO51 9DL, U.K.
Phone: 44/0870.851241
FAX: 44/0870.851251

2 INSTALLATION OVERVIEW

2.1 Introduction

This section provides hardware equipment information for installing the GMA 347 Audio Panel, related hardware and suggestions relating to the marker beacon antenna. Installation of the GMA 347 should meet the requirements of FAA Advisory Circulars AC 43.13-1B and AC 43.13-2A where applicable. Cabling is fabricated by the installing agency to fit each particular aircraft.

2.2 Wiring

Use AWG #22 or larger wire for all connections unless otherwise specified in the interconnect diagrams in Appendix C. The standard pin contacts supplied in the connector kit are compatible with up to AWG #22 wire. In cases where some installations have more than one unit sharing a common circuit breaker, sizing and wire gauge is based on aircraft circuit breaker layout, length of wiring, current draw of units, and internal unit protection characteristics. Do not attempt to combine more than one unit on the same circuit breaker unless it is specified on aircraft manufacturer approved drawings.

In some cases, a larger gauge wire such as AWG #18 or #16 may be needed for power connections. Extended barrel contacts for AWG #16 and #18 wire are available from Garmin, if required. Special thin-wall heat shrink tubing is also provided to insulate the extended barrels inside the backshell. If using #16 or #18 barrel contacts, ensure that no two contacts are mounted directly adjacent to each other. This minimizes the risk of contacts touching and shorting to adjacent pins and to ground.

Ensure that routing of the wiring does not come in contact with sources of heat, RF or EMI interference. Check that there is ample space for the cabling and mating connectors. Avoid sharp bends in cabling and routing near aircraft control cables.

2.3 Cooling Air

The GMA 347 does not have provisions for attaching cooling air and does not generate an excessive amount of heat during typical operations, however the thermal characteristics of the installation should always be assessed. An undesirable thermal condition could be created due to the unit's own internal power dissipation combined with restricted ventilation, or due to heat generated by adjacent equipment. Limiting thermal build up, by means of fan or natural convection is always a good practice and is recommended to increase the product life.

2.4 Installation Materials

2.4.1 Configurations Available

The GMA 347 is available in three versions under the following part numbers. Catalog part numbers are shown with and without the installation kit.

| Model | Front Panel Color | Unit P/N | Catalog P/N | Installation Kit |
|----------|-------------------|--------------|--------------|------------------|
| GMA 347 | Black | 011-00807-00 | 010-00275-00 | No |
| GMA 347 | Black | 011-00807-00 | 010-00275-01 | Yes |
| GMA 347 | Gray | 011-00807-10 | 010-00275-10 | No |
| GMA 347 | Gray | 011-00807-10 | 010-00275-11 | Yes |
| GMA 347H | Black | 011-00807-20 | 010-00275-20 | No |
| GMA 347H | Black | 011-00807-20 | 010-00275-21 | Yes |

2.4.2 Equipment Available

Each of the following accessories is provided separately or in kit form for the GMA 347. The installation kit includes the unit and the following hardware:

| Item | Garmin P/N |
|------------------------------------|--------------|
| Sub Assy, Connector Kit, GMA 347 | 011-00813-01 |
| SMP, Install Rack, GMA 347 | 115-00427-00 |
| Sub Assy, Backplate, GMA 347 | 011-00812-00 |
| Configuration Module Kit | 011-00979-00 |
| Garmin Marker Beacon Antenna Kit** | 010-10175-00 |

** Note: A marker beacon antenna approved to TSO C35d that has been installed to meet the requirements of this manual may be approved for use with the GMA 347.

2.4.3 Additional Equipment Required

- Antenna sealant (use manufacturer's instructions, install according to FAA Advisory Circular AC 43.13-2A).
- Cables: The installer will fabricate and supply all system cables. Interconnect wiring diagrams are detailed in Appendix C.
- Hardware #6-32 x 100° Flat Head SS Screw [(MS24693, AN507R or other approved fastener) (6 ea.)] and #6-32 Self-Locking Nut [MS21042 or other approved fastener (6 ea.)]. Hardware required to mount the installation rack is not provided.
- Stereo headphone jacks (up to 6), microphone jacks (up to 6), 3.5 mm stereo jacks (up to 2), and insulating washers for all.

2.5 GMA 347 Wiring and Software Configuration Options

The GMA 347 can be configured in different ways for the flight crew. Consideration of options should be discussed with the end user(s) of the aircraft before wiring begins. While Section 4 and Appendix C contain connection details, the actual features employed or omitted are dependent on the wiring options and the Software configuration selected. Refer to Section 5 for configuration instructions.

2.5.1 Hard Wiring Configuration Options

The following list shows the hard wiring configuration options available for the GMA 347.

| Function and Purpose | Hard Wiring Configuration Options |
|--|--|
| Com Swap. Transfers the active microphone between Com 1 and Com 2. | Com Swap Pushbutton Switch |
| External lamps. Provides an extra set of Marker Beacon indicators located away from the GMA 347. | External Marker Beacon Lights |
| Two Playback Options: An external pushbutton activates voice recorder playback. A toggle switch enables or disables recording. | Record Playback Pushbutton Switch Record Playback Toggle Switch |
| PA MUTE is an output from the GMA that is pulled low when active. It is used to trigger the mute function of an external PA system. | PA mute |
| A remote switch can be used to enable or disable the auxiliary input. | Remote Auxiliary Switch |

2.5.2 Software Configuration Options

The following list shows the software configurations available for the GMA 347. Configuration program instructions are found in section 5.

| Function and Purpose | Software Configuration |
|--|---|
| Audio Inputs. Allow or disable the use of external receivers | Enable or Disable DME, ADF, COM3, Play, PA, SPKR, TEL, and Split COM |
| Defeat the (MASQ) Master Squelch feature | Deactivate MASQ |
| Telephone. Remove telephone capability | Disable Telephone Channel |
| Sidetone. Disable the sound of transmission in the headset | Enable or Disable Sidetone |
| COM MUTE ON TX | Can be disabled. Audio on unselected COMs is muted while the selected COM is transmitting audio |
| COM MUTE ON RX | Can be disabled. Audio on unselected COMs is muted while the selected COM is receiving audio |
| Audio level. Volume control adjustment | Adjust Audio level of Music 1 and Music 2, Unswitched 1, Unswitched 2, Unswitched 3 and Altitude Warning, SPKR, Pilot and Copilot Mic Volume, Master Squelch Threshold, and Marker volume |
| Marker Threshold | Marker Beacon threshold levels are adjustable for HI and LO sense |
| ICS Mute | ICS Muting of Music 1 can be enabled or disabled |
| Record Com2 | Pilot or Copilot COM recording. During the Split Com mode, COM 1 or COM 2 audio can be selected for voice recording and playback |

2.5.1 Transmit Interlock and Split COM Operation

| |
|-------------|
| NOTE |
|-------------|

Garmin makes no expressed or implied guarantees regarding the suitability of the Split COM feature in any given installation.

In small aircraft, COM and Nav receiver interference is affected by both the distance between antennas and the tuned frequency separation.

With transmit interlock activated in either the GMA 347 or the COM transceivers, Split COM operation between a flight crew of more than one pilot is affected.

In aircraft that have a transmit interlock feature, when either transmitter is keyed, all other receivers are muted so that they won't pick up interference from the active COM transmitter. This is the preferred option for single pilot operation.

For aircraft with two flight crew members, transmit-interlock would probably interfere with communications. When the pilot or the copilot transmit, no audio is heard on any other receiver. This

For aircraft with two flight crew members, transmit-interlock would probably interfere with communications. When the pilot or the copilot transmit, no audio is heard on any other receiver. This means that if the pilot is communicating with ATC while the copilot transmits on another radio, all pilot reception is cut off during the time of copilot transmission.

If the installation does not have transmit-interlock activated, all the receivers are listening all the time whether any radio is transmitting or not. Split COM performance varies significantly across installations.

If the transceivers interfere with each other, transmission by one radio produces static or squeal, thus loss of communication from any other radio.

2.6 Antenna Installation

2.6.1 Location Considerations

The marker beacon antenna should be mounted on a flat surface on the underside of the aircraft. Mount the antenna so that there is a minimum of structure between it and the ground radio stations. Locate it as far away as possible from transmitter antennas.

Best results with split COM mode will be obtained when the COM 1 and COM 2 antennas are mounted on opposite sides of the aircraft (top/bottom).

2.6.2 Marker Beacon Antenna Mounting

Install the marker beacon antenna according to the antenna manufacturer's instructions and FAA Advisory Circulars AC 43.13-1B and AC 43.13-2A, Chapters 2 and 3, as applicable. If the antenna is being installed on a composite aircraft, ground planes must be added. Conductive wire mesh, radials or thin aluminum sheets embedded in the composite material provide the proper ground plane allowing the antenna pattern (gain) to be maximized for optimum performance.

2.6.3 Marker Beacon Antenna Cable Installation

Use coaxial cable meeting the applicable aviation regulation for the marker beacon antenna. Any cable meeting specifications is acceptable for the installation. When routing antenna cables, observe the following precautions:

- All cable routing should be kept as short and as direct as possible.
- Avoid sharp bends.
- Avoid routing cables near power sources (e.g., 400 Hz generators, trim motors, etc.) or near power for fluorescent lighting.
- Avoid routing cable near ADF antenna cable (allow at least a 12-inch separation).

2.7 Installation Approval Considerations for Pressurized Aircraft

Antenna and cable installations on pressurized cabin aircraft require FAA approved installation design and engineering substantiation data whenever such installations incorporate alteration (penetration) of the cabin pressure vessel by connector holes and/or mounting arrangements.

For needed engineering support pertaining to the design and approval of such pressurized aircraft antenna installations, it is recommended that the installer proceed according to any of the following listed alternatives:

1. Obtain approved antenna installation design data from the aircraft manufacturer.
2. Obtain an FAA approved Supplemental Type Certificate (STC) pertaining to and valid for the subject antenna installation.
3. Contact the FAA Aircraft Certification Office in the appropriate Region and request identification of FAA Designated Engineering Representatives (DERs) who are authorized to prepare and approve the required antenna installation engineering data.
4. Obtain FAA Advisory Circular AC-183C and select (and contact) a DER from the roster of individuals identified thereunder.
5. Contact an aviation industry organization such as the Aircraft Electronics Association and request their assistance.

2.8 Electrical Noise

Because the audio panel is a point in the aircraft where signals from many pieces of equipment are brought together, take care to minimize effects from coupled interference and ground loops.

Coupled interference can creep into audio system interconnecting cables when they are routed near large AC electric fields, AC voltage sources and pulse equipment (strobes, spark plugs, magnetos, EL displays, CRTs, etc). Interference can also couple into audio system interconnecting cables by magnetic induction when they are routed near large AC current-carrying conductors or switched DC equipment (heaters, solenoids, fans, autopilot servos, etc).

Ground loops are created when there is more than one path in which return currents flow or when signal returns share the same path as large currents from other equipment. These large currents create differences in ground potential between the various equipment operating in the aircraft. These differences in potential can produce an additive effect on audio panel input signals.

The audio panel may “see” the desired input signal plus an unwanted component injected by ground differentials, a common cause of alternator-related noise. This is the main reason why all audio jacks should be isolated from ground. Terminating audio shields just at one end eliminates another potential ground loop injection point.

Single-point grounding cannot be overstressed for the various avionics producing and processing audio signals. Single-point, in this context, means that the various pieces of equipment share a single common ground connection back to the airframe. Good aircraft electrical/charging system ground bonding is also important.

The wiring diagrams and accompanying notes in this manual should be followed closely to minimize noise effects.

2.9 GMA 347 Mounting

The GMA 347 mounting surface must be capable of providing structural support and electrical bond to the aircraft to minimize radiated EMI and provide protection from High-Intensity Radiation Fields (HIRF).

The GMA 347 is mounted using it's own system rack. Figure 2-1 shows the GMA 347 unit rack.

- 1 Slide the unit into the rack until the front lobe of the unit touches the rack.
- 2 Insert a 3/32" hex wrench into the access hole on the faceplate.
- 3 Turn the hex wrench clockwise until the unit is secured in the rack. Continue turning until tight. Do not over-tighten the screw.
- 4 To remove the unit from the rack, turn the hex wrench counterclockwise until it disengages from the rack.

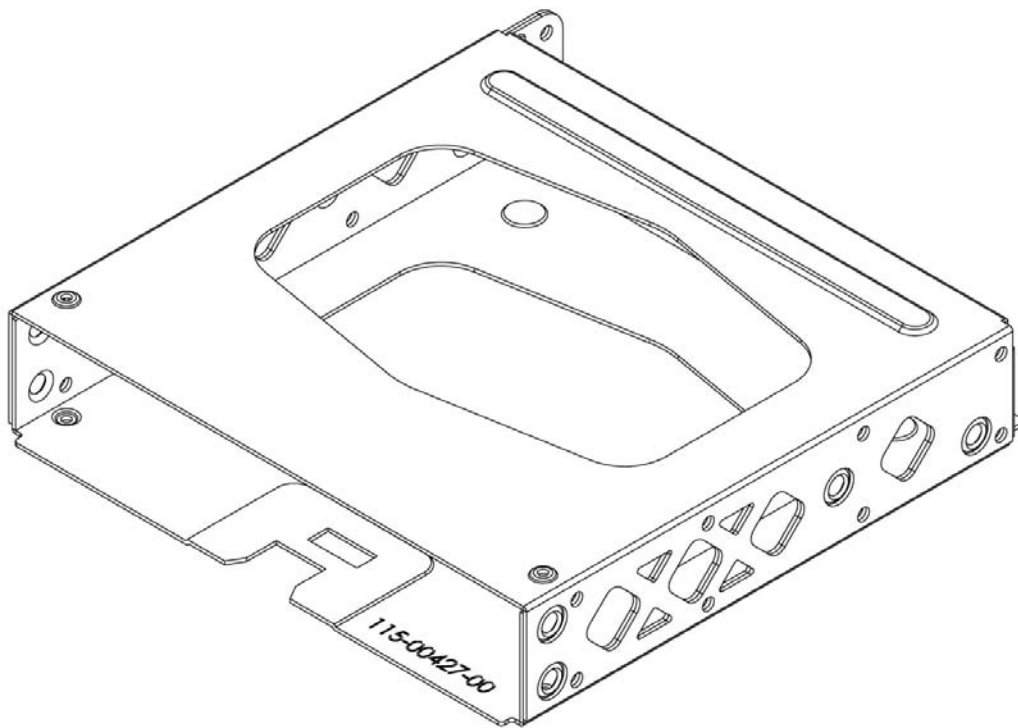


Figure 2-1. GMA 347 Unit Rack (115-00427-00)

This page intentionally left blank

3 INSTALLATION PROCEDURE

3.1 Unpacking Unit

Carefully unpack the equipment and make a visual inspection of the unit for evidence of damage incurred during shipment. If the unit is damaged, notify the carrier and file a claim. To justify a claim, save the original shipping container and all packing materials. Do not return the unit to Garmin until the carrier has authorized the claim.

Retain the original shipping containers for storage. If the original containers are not available, a separate cardboard container should be prepared that is large enough to accommodate sufficient packing material to prevent movement of the item within the container.

3.2 Marker Beacon Antenna Installation

Install the marker beacon antenna according to the antenna manufacturer's instructions and FAA Advisory Circulars AC 43.13-1B and AC 43.13-2A Chapters 2 and 3, as applicable.

3.3 Marker Beacon Antenna Cable Connectors

The marker beacon antenna cable requires a BNC or similar coax connector on the antenna end. Follow connector manufacturer instructions for assembly of the antenna connector.

3.4 Electrical Connections

All electrical connections to the GMA 347, including the marker beacon antenna and shield ground, are made through two 78-pin D-subminiature connectors (see Figure 4-1). Tables in Section 4 define the electrical characteristics of all input and output signals. Required connector and associated hardware are supplied in the connector kit (P/N 011-00813-01). See figures in Appendix C for interconnect wiring diagrams.

| |
|----------------|
| CAUTION |
|----------------|

Check wiring connections for errors before inserting the GMA 347 into the rack. Incorrect wiring could cause internal component damage.

Table 3-1. Pin Contact Part Numbers (Hi Density)

| Manufacturer | 78 pin D-Subminiature Connectors (P3471, 3472) | | | |
|--------------|--|------------------------|--------------|---------------|
| | 16 AWG (Power Only) | 18 AWG (Power Only) | 20 AWG | 22-28 AWG |
| Garmin P/N | 336-00044-01 | 336-00044-00 | 336-00044-02 | 336-00021-00 |
| Military P/N | N/A | N/A | N/A | M39029/58-360 |
| AMP | N/A | N/A | N/A | 204370-2 |
| Positronic | N/A | N/A | N/A | MC8522D |
| ITT Cannon | N/A | N/A | N/A | 030-2042-000 |

Table 3-2. Recommended Crimp Tools (Hi Density)

| Manufacturer | Hand Crimping Tool | 16 & 18 & 20 AWG | | 22-28 AWG | |
|--------------|--------------------|------------------|---|--------------|----------------------------------|
| | | Positioner | Insertion/ Extraction Tool (Note 2) | Positioner | Insertion/ Extraction Tool |
| Military P/N | M22520/2-01 | N/A | M81969/1-04 | M22520/2-09 | M81969/1-04 |
| Positronic | 9507 | 9502-11 | M81969/1-04 | 9502-3 | M81969/1-04 |
| ITT Cannon | 995-0001-584 | N/A | N/A | 995-0001-739 | N/A |
| AMP | 601966-1 | N/A | 91067-1 | 601966-6 | 91067-1 |
| Daniels | AFM8 | K774 | M81969/1-04 | K42 | M81969/1-04 |
| Astro | 615717 | N/A | M81969/1-04 | 615725 | M81969/1-04 |

NOTES

1. Non-Garmin part numbers shown are not maintained by Garmin and consequently are subject to change without notice.
2. Extracting the #16, #18 and #20 contact requires that the expanded wire barrel be cut off from the contact. It may also be necessary to push the pin out from the face of the connector when using an extractor due to the absence of the wire. A new contact must be used when reassembling the connector.

3.5 Backshell Assembly and D-Subminiature Connectors

The GMA 347 connector kit (011-00813-01) includes two Garmin backshell assemblies. Backshell connectors give the installer the ability to terminate shield grounds at the backshell housing using the Shield Block ground kit. The term 'D-Sub' (D-Subminiature) connectors have a letter "D" physical shape. D-Sub refers only to the polarized shell that holds the contacts (pins or sockets) in place. Table 3-3 lists Garmin part numbers for the GMA 347 D-Sub Connectors and the Backshell Assembly.

Table 3-3. Backshell Assembly (011-00812-00)

| Figure Ref | Description | Garmin P/N |
|------------|--|---|
| 1 | Cast Housing (From Garmin Backshell kit.) | 125-00085-00 |
| 2 | Shield block | 117-00147-xx |
| 3 | Screw, 4-40 x.250, FLHP100°, SS/P, Nylon. | 211-63234-08 |
| 4 | Multiple Conductor Shielded Cable (See Interconnect Diagrams, Appendix C) | As Required |
| 5 | Shield Termination | As Required |
| 6 | Braid, Flat (19 – 20 AWG equivalent, tinned plated copper strands 36 AWG, Circular Mil Area 1000 – 1300) | As Required |
| 7 | Shrink Tubing | As Required |
| 8 | Pins | 336-00021-00 |
| 9 | Ring terminal, #8, insulated, 18-22 AWG, 14-16 AWG, 10-12 AWG | MS25036-149, MS25036-153, MS25036-156 |
| 10 | Screw, PHP, 8-32x.312", Stainless or Cad Plated Steel | MS51957-42, MS35206-242 |
| 11 | Split Washer, #8, (.045" compressed thickness) Stainless or Cad-plated steel | MS35338-137, MS35338-42 |
| 12 | Flat Washer, #8, .032" thick, .174"ID, .375" OD, Stainless or Cad Plated Steel | NAS1149CN832R, NAS1149FN832P |
| 13 | Silicon Fusion Tape | 249-00114-00 |
| 14 | Strain Relief | 115-00499-xx |
| 15 | Screw, 4-40x.375, PHP, SS/P, w/Nylon | 211-60234-10 |
| 16 | Lid | 115-00500-xx |
| 17 | Screw, 4-40x.187, FLHP100, SS/P, w/Nylon | 211-63234-06 |

3.5.1 Shield Block Assembly Procedure

The parts for the connector and backshell assembly, GMA 347 installations, are listed in Table 3-3 and shown in Figure 3-1.

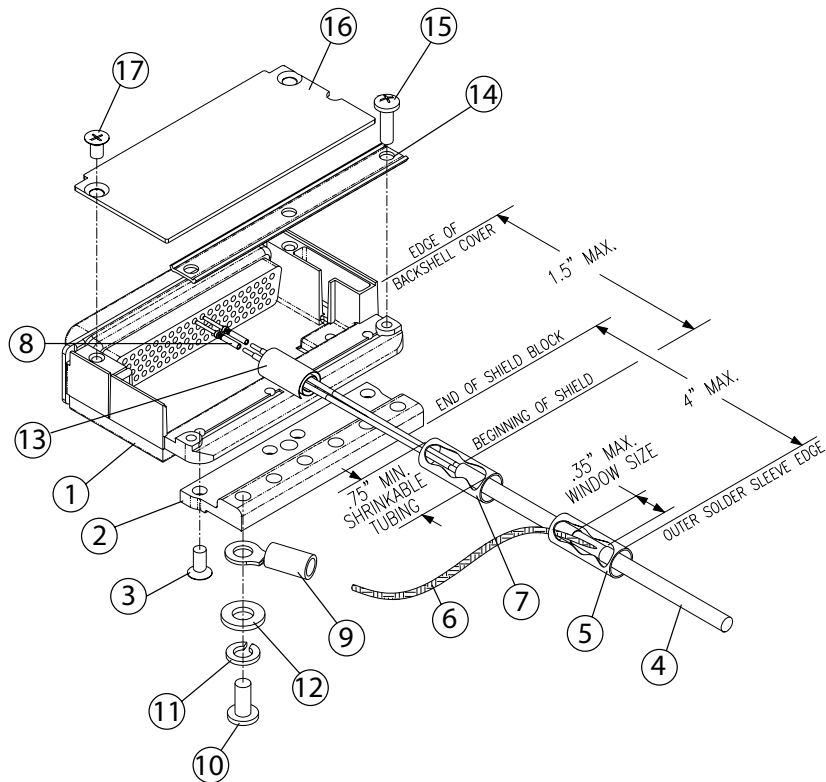


Figure 3-1. Shield Block Install onto Backshell Connector Assembly

Table 3-4. Shield Block Components

| Backshell Assembly Garmin P/N | Shield Block Garmin P/N |
|--|------------------------------------|
| 011-00950-04 (78 Pin High Density) | 011-01169-01 |

1. Attach the Shield Block(s) (2) to the backshell (1) by inserting the flathead screws (3) through the holes on the Shield Block and threading into the tapped holes on the backshell (1). (See Figure 3-1). The appropriate number of Shield Block kits is included in the GMA 347 connector kit.

Table 3-5. Shielded Cable Preparation

| Float Min | Float Max | Ideal Float | Window Min | Window Max | Ideal Window |
|------------------|------------------|--------------------|-------------------|-------------------|---------------------|
| 1.5" | 2.5" | 2.0" | 3.0" | 5.5" | 4.5" |

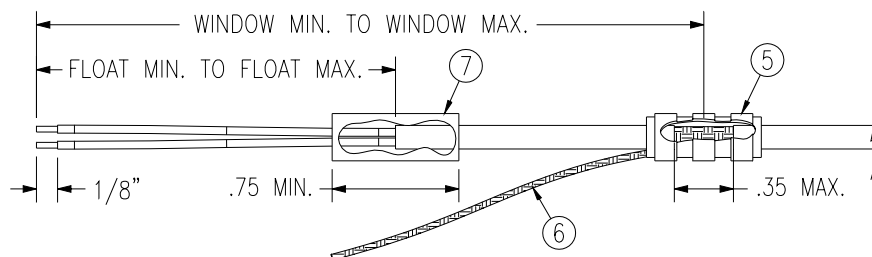


Figure 3-2. Shielded Cable Preparation

2. At one end of a shielded cable (4) measure back a distance between “Window Min” to “Window Max” (Table 3-5) and cut a window (max size 0.35”) in the jacket to expose the shield. (See Figure 3-2). Use caution when cutting the jacket to avoid damaging the individual braids of the shield. When dealing with a densely populated connector with many cables it may prove beneficial to stagger the windows throughout the “Window Min” to “Window Max” range. If staggering is not needed the “Ideal Window” length is recommended.

Tools needed to Accomplish the Window Cut:

- Coaxial Cable Stripper
- Thermal Stripper
- Sharp Razor Blade

3. Connect a Flat Braid (6) to the shield exposed through the window of the prepared cable assembly (4). The Flat Braid goes out the front of the termination towards the connector. Do not allow wires to exit the rear of the termination and loop back towards the connector. (See Figure 3-2). Make this connection using an approved shield termination technique. Refer to FAA Advisory Circular AC 43.13 as a reference for termination techniques.

Preferred Method, Solder Sleeves:

Slide a solder sleeve (5) onto the prepared cable assembly (4) and connect the Flat Braid (6) to the shield using a heat gun approved for use with solder sleeves. It may be easier to use a solder sleeve with a pre-installed Flat Braid versus having to cut a length of Flat Braid to be used. The chosen size of solder sleeve must accommodate both the number of conductors present in the cable and the Flat Braid (6) to be attached.

NOTE

Solder Sleeves with pre-installed Flat Braid: A preferred solder sleeve is the Raychem S03 Series with the thermochromic temperature indicator. These solder sleeves come with a pre-installed braid and effectively take the place of items 5 and 6. For detailed instructions on product use, refer to Raychem installation procedure RCPS 100-70.

Raychem Recommended Heating Tools:

- HL1802E
- AA-400 Super Heater
- CV-1981
- MiniRay
- IR-1759

Individual Solder Sleeves and Flat Braid

Solder Sleeves:

Reference the following MIL-Specs for general solder sleeves:
(M83519/1-1, M83519/1-2, M83519/1-3, M83519/1-4, M83519/1-5).

Flat Braid:

If the preferred Raychem sleeves are not being used, the individual flat braid selected should conform to ASTM B33 for tinned copper and be made up of 36 AWG strands to form an approximately 19-20 AWG equivalent flat braid. A circular mil area range of 1000 to 1300 is required. The number of individual strands in each braid bundle is not specified.

NOTE

Flat Braid as opposed to insulated wire is specified in order to insure continuing airworthiness by allowing for visual inspection of the conductor.

Secondary Method, Heat Shrink instead of Solder Sleeves:

Solder a Flat Braid (6) to the shield exposed through the window of the prepared cable assembly (4). Ensure a solid electrical connection through the use of acceptable soldering practices. Use care to avoid applying excessive heat that burns through the insulation of the center conductors and shorts the shield to the signal wire. Slide a minimum 0.75" of Teflon heat shrinkable tubing (5) onto the prepared wire assembly and shrink using a heat gun. The chosen size of heat shrinkage tubing must accommodate both the number of conductors present in the cable and the Flat Braid (6) to be attached.

-
4. At the same end of the shielded cable (4) and ahead of the previous shield termination, strip back “Float Min” to “Float Max” (Table 3-5) length of jacket and shield to expose the insulated center conductors. (See Figure 3-2). It may be best to build the “Ideal Float” length optimally.

Preferred Method:

The jacket and shield should be cut off at the same point so no shield is exposed. Slide 0.75” minimum of Teflon heat shrinkable tubing (7) onto the cable and use a heat gun to shrink the tubing. The chosen size of heat shrinkage tubing must accommodate the number of conductors present in the cable

Secondary Method:

Leave a max 0.35” of shield extending past the jacket. Fold this 0.35” of shield back over the jacket. Slide a solder sleeve (7) over the end of the cable and use a heat gun approved for solder sleeves to secure the connection. The chosen size of solder sleeve must accommodate the number of conductors present in the cable.

5. Strip back 1/8” of insulation and crimp a pin (8) to each of the conductors in the shielded cable.
6. Insert newly crimped pins and wires into the appropriate connector housing location as specified by the installation wiring diagrams.
7. Cut the Flat Braid (6) to a length with the addition of a ring terminal that will reach one of the tapped holes of the Shield Block (2). (See Figure 3-1). An appropriate amount of excess length without looping should be given to the Flat Braid (6) to allow it to move freely with the wire bundle. Note that the maximum distance from the backshell allowed for the window splice should keep the Flat Braid (6) to a worst case length of approximately 4”.
8. Guidelines for terminating the newly cutoff Flat Braid(s) (item 6) with insulated ring terminals (9):
 - Each tapped hole on the Shield Block (2) may accommodate only two ring terminals (9).
 - It is preferred that only two Flat Braids (6) be terminated per ring terminal. Two Flat Braids per ring terminal will necessitate the use of a Ring terminal, #8, insulated, 14-16 AWG (MS25036-153).
 - If only a single Flat Braid is left or if only a single Flat Braid is need for this connector, a Ring terminal, #8, insulated, 18-22 AWG (MS25036-149) can accommodate this single Flat Braid.
 - If more braids exist for this connector than two per ring terminal, it is permissible to terminate three braids per ring terminal. This will necessitate the use of a Ring terminal, #8, insulated, 10-12 AWG (MS25036-156).
 - In rare situations where more braids need to be terminated for this connector than three per ring terminal it is allowable to daisy chain a maximum of two shields together before coming to the ring terminal. (See Figure 3-3).

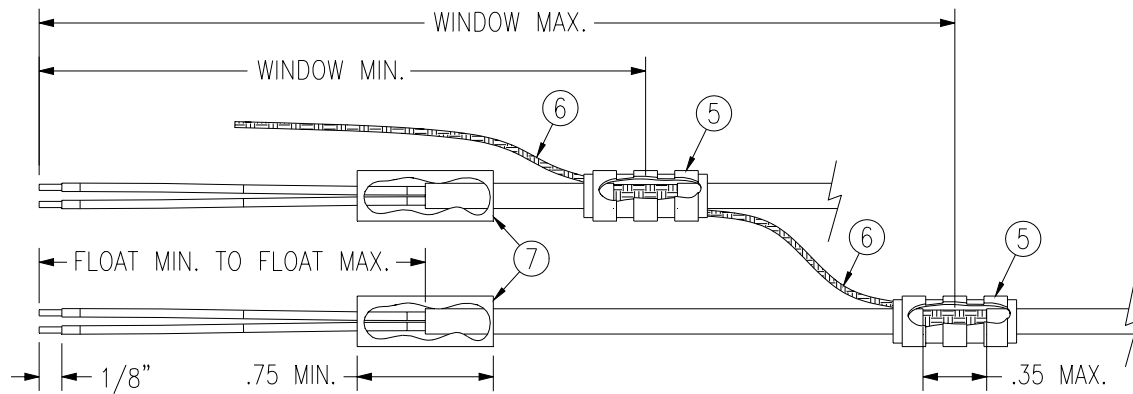


Figure 3-3: Daisy Chain Method for Shield Termination

9. Repeat steps 2 through 8 as needed for the remaining shielded cables.
10. Terminate the ring terminals to the Shield Block (2) by placing items on the Pan Head Screw (10) in the following order: Split Washer (11), Flat Washer (12), first Ring Terminal, second Ring Terminal if needed, before finally inserting the screw into the tapped holes on the Shield Block. Do not violate the guidelines presented in Step 8 regarding ring terminals.
11. It is recommended to wrap the cable bundle with Silicone Fusion Tape (13) (GPN: 249-00114-00 or a similar version) at the point where the backshell strain relief and cast housing will contact the cable bundle. Note: Choosing to use this tape is at the discretion of the installer.
12. Place the smooth side of the backshell strain relief (14) across the cable bundle and secure using the three screws (15). Warning: Placing the grooved side of the strain relief across the cable bundle may risk damage to wires.
13. Attach the cover (16) to the backshell (1) using two screws (17).

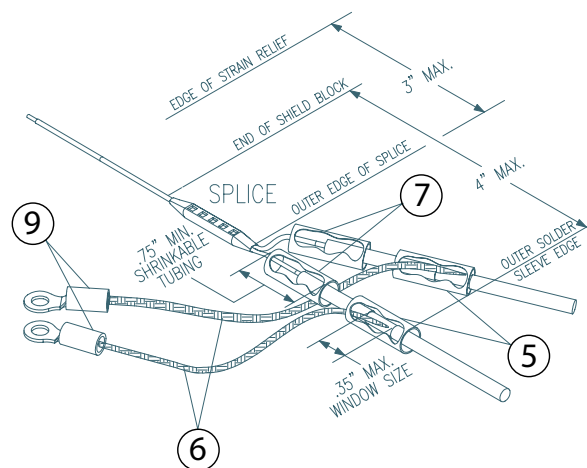


Figure 3-4: Parallel Shield Termination

3.5.2 Configuration Module Installation

Table 3-6 lists part numbers for the Configuration Module Kit.

Table 3-6. Configuration Module Kit – 011-00979-00

| Item | Description | Garmin P/N |
|----------------------|-----------------------------|-------------------|
| Configuration Module | PCB Board Assembly w/EEPROM | 012-00605-00 |
| Cable | 4-Conductor Harness | 325-00122-00 |
| Crimp Pins | #22 AWG (HD) | 336-00021-00 |
| Spacer | Spacer, Config Module | 213-00043-00 |

3.5.3 Configuration Module Assembly Procedure

Table 3-7. Configuration Module Wire Color Reference Chart

| Color | Function | J3472 Pin |
|--------|----------|-----------|
| Black | Ground | 1 |
| Red | Vcc | 21 |
| Yellow | Data | 40 |
| White | Clock | 60 |

1. Crimp pins (4) onto each wire of the four-conductor wire harness (3). Strip 1/8" of insulation from each wire prior to crimping.
2. Insert newly crimped pins and wires (3, 4) into the appropriate connector housing (5) location shown in the figure below.
3. Apply the spacer (2) by wrapping it around the PCB Board (1) making sure to insert the plastic connector mounted on the board into the hole provided in the spacer.
4. Plug the four-conductor wire harness (3) into the connector on the PCB Board (1).
5. Insert into the backshell (6) recess, PCB Board (1) with pad (2) in position.
6. Attach cover (7) to backshell (6) using screws (8).

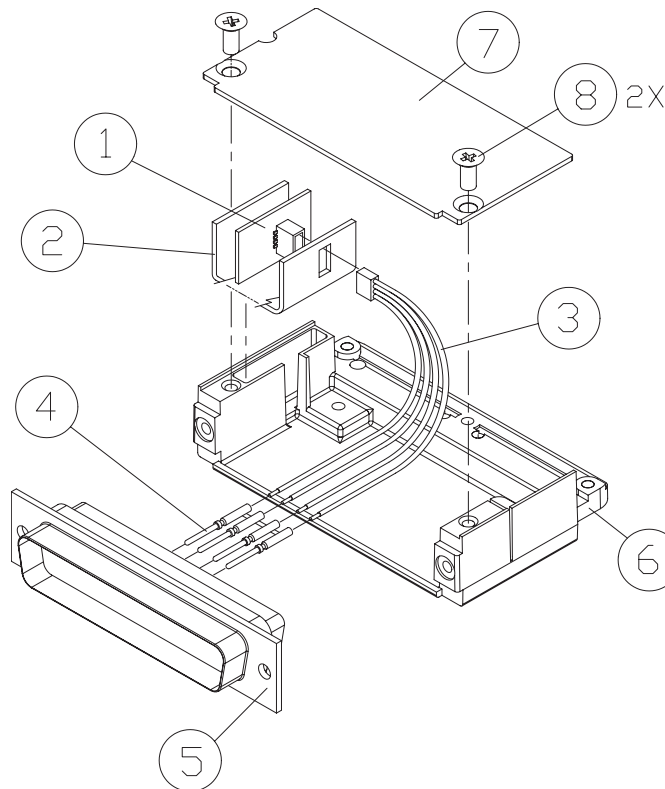


Figure 3-5. Configuration Module Installation

3.6 Circuit Breaker Placard

Install a Circuit Breaker Placard labeled Audio Panel, Audio Panel 1 or Audio Panel 2 as appropriate as indicated in FAA Advisory Circular AC 43.13-2A, Paragraph 27c(4).

3.7 GMA 347 Unit Installation

CAUTION

Do not use excessive force when inserting the GMA 347 into the rack. This may damage the connectors, unit, and/or unit rack. If heavy resistance is felt during installation, stop! Remove the GMA 347 and identify the source of resistance.

For final installation and assembly, refer to the outline and installation drawings shown in Appendix B of this manual.

1. Assemble the backshell as described in Section 3.5.
2. Connect both backshells to the rear plate using the screws provided in the connector kit.
3. Mount the unit rack to a suitable mounting location on the panel using the provided nutplates.
4. Assemble the rear plate into the GMA 347 unit rack.
5. Insert the GMA 347 into the rack, noting proper orientation as shown on the installation drawing in Appendix B.
6. Lock the GMA 347 in place using a 3/32 hex wrench.

3.8 Post Installation Configuration and Checkout

Refer to Section 5 for GMA 347 System Configuration.

CAUTION

Check wiring connections for errors before inserting the GMA 347 into the tray. Incorrect wiring could cause internal component damage.

Except for marker beacon operation, an in-aircraft checkout may be performed in the aircraft on the ramp with a known good microphone, headset, speaker and avionics receivers.

For testing the marker beacon, use a ramp tester that transmits a 75 MHz marker beacon test signal.

For installation checkout procedures refer to the GMA 347 Pilot's Guide (190-00325-00) for GMA 347 operation. Verify that every function of the GMA 347 operates correctly.

| |
|-------------|
| NOTE |
|-------------|

In the following procedural steps outlined below, allow for variations in configuration settings for the particular unit under test.

3.8.1 Lamp Test

Apply power to the unit by rotating the Pilot's intercom volume knob clockwise out of the detent.

During power-up, the unit undergoes a self-test, illuminating all panel annunciator lights for approximately two seconds (between 1/2 and 2 seconds).

Confirm the operation of the GMA 347 internal LED annunciators and marker beacon LED's. Cover the photocell with a finger and observe that the LED annunciators dim automatically. Check the front panel key backlighting and dimming function. Key brightness is controlled with the aircraft radio lights dimming bus.

3.8.2 Failsafe Operation Check

1. Turn the unit off by rotating the Pilot's intercom volume knob counter clockwise.
2. Check the failsafe operation by exercising the COM 1 microphone, microphone key and audio over the headphones. A stereo headset connected to the Pilot headphone jack will provide audio in the left earphone only.
3. Turn the unit back on to continue testing.

3.8.3 Transceiver Operational Check

1. Perform a ramp test radio check by exercising the installed transceivers, microphone, microphone key and audio over the headphones and speaker.
2. Verify that communications are loud and clear and PTT operation is correct.

| |
|-------------|
| NOTE |
|-------------|

Split COM performance varies significantly across installations and is affected by both the distance between the antennas and the separation of the tuned frequencies.

3. In appropriate installations, check for Pilot/Copilot microphone operation when using the Split COM (COM 1/2 key) function.

3.8.4 Intercom System (ICS) Check

| |
|-------------|
| NOTE |
|-------------|

If a monaural headset is plugged into any stereo phone jack position, no damage will occur to the GMA 347. In the case of plugging a monaural headset into any passenger position, any stereo listener will lose one channel when another passenger plugs in a monaural headset.

1. Set the intercom to the ALL mode (Pilot and Copilot LED's off.)
2. Plug in headsets at each ICS position.
3. Adjust squelch and volume for each position and verify that the ICS is working properly.
4. Check Pilot and Copilot ICS positions for isolation and proper operation of volume and squelch controls.
5. Press and hold the SPKR key for two seconds. Verify that the SPKR key annunciator flashes, indicating the PA mode, and that microphone audio is heard over the speaker.

3.8.5 Aircraft Receivers Check

1. Select the audio source for each avionics unit installed in the aircraft and check for audio over the headsets.
2. Check for Pilot/Copilot audio isolation when pressing the Split COM (COM 1/2) key.
3. Press the SPKR key and verify that any selected audio is heard over the speaker.

3.8.6 Clearance Recording Check

1. Allow COM 1 receiver to operate for at least two and one half (2.5) minutes of active operation.
2. Press the PLAY key once to play back the latest recorded memory block of COM 1 audio.
3. Press the PLAY key again to play the previous memory block of COM 1 audio. Continue stepping backward into the memory blocks until listening to the first block of audio. A total of 2.5 minutes of audio is recorded.
4. Verify that after playing back the full 2.5 minutes of stored audio, that the playback system audio stops.

3.8.7 Music System Check

1. Set the intercom to the ALL mode (Pilot and Copilot LED's off.)
2. Connect a stereo audio source to MUSIC 1. Verify that stereo audio is heard over the Pilot and Copilot headset positions.
3. Tune a station on COM 1 and verify that the sound is muted by active COM 1 audio (break squelch on COM 1 if necessary).
4. Connect a stereo music source to MUSIC 2. Verify that stereo audio is heard in the passenger headsets.

3.8.8 Flight Check

| |
|----------------|
| CAUTION |
|----------------|

Be sure to check all aircraft control movements before flight is attempted to insure that the wiring harness does not touch any moving part. Verify proper operation of the marker beacon during a flight test under VFR conditions.

Perform a flight test after installing the unit to ensure satisfactory performance of the audio and marker beacon receiver functions. Verify proper operation of the marker lamps and marker audio, including the marker audio mute function. Check proper operation of the sensitivity selection, using the SENS key, by flying towards the outer marker (OM) position initially using HI sensitivity. When the OM audio is just barely audible in the headset, switching to LO sensitivity should reduce or eliminate the audio.

This completes the in-aircraft post installation checkout.

4 SYSTEM INTERCONNECTS

NOTE

When installations that have a Garmin GMA 340 audio panel are being upgraded to a GMA 347, refer to figure C-5 in appendix C for a pin-to-pin comparison of the two units.

4.1 Connector Description

The GMA 347 has two 78-pin connectors located at the rear of the unit designated P3471 and P3472. P3471 and P3472 are clearly marked on the back of the rack. P3471 and P3472 pins are configured as shown in the following illustration:

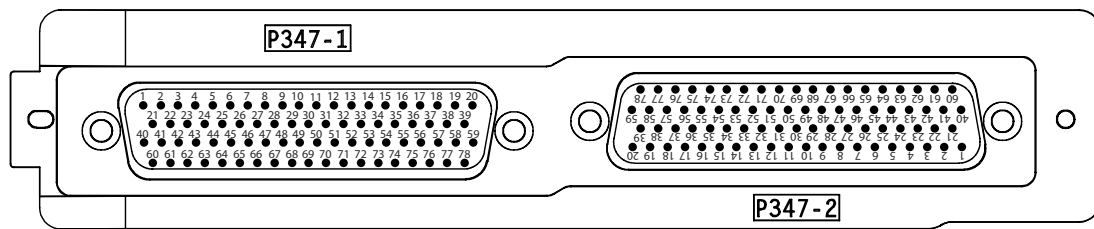


Figure 4-1. Backshell Rear Connector Plate

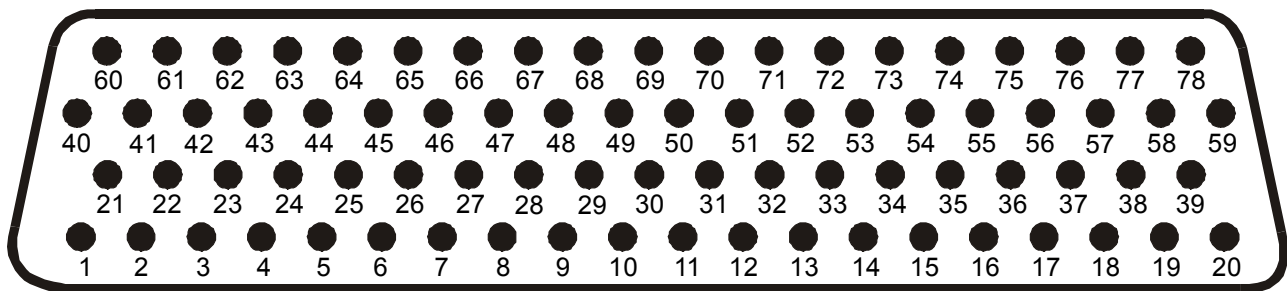


Figure 4-2. Rear Connectors J3471 and J3472, Viewed From Back of Unit

4.2 Connectors J3471 and J3472

J3471 and J3472 pin assignments are given in Tables 4-1 and 4-2.

Following the pin assignment table, additional tables group pin connections by function.

An asterisk (*) following a signal name denotes that the signal is an Active Low, requiring a ground to activate.

Table 4-1. J3471 Pin Assignments

| Pin | Pin Name | I/O |
|------------|---------------------------------|------------|
| 1 | FAIL SAFE WARN AUDIO IN | In |
| 2 | RESERVED | -- |
| 3 | TEL RINGER AUDIO IN HI | In |
| 4 | TEL RINGER AUDIO IN LO | In |
| 5 | RESERVED | -- |
| 6 | ON-SIDE NAV AUDIO IN HI | In |
| 7 | ON-SIDE COM AUDIO IN HI | In |
| 8 | ON-SIDE COM AUDIO LO | I/O |
| 9 | PILOT HEADSET AUDIO OUT LEFT | Out |
| 10 | PILOT HEADSET AUDIO OUT RIGHT | Out |
| 11 | PILOT HEADSET AUDIO OUT LO | Out |
| 12 | CROSS-SIDE COM AUDIO IN HI | In |
| 13 | CROSS-SIDE COM AUDIO LO | I/O |
| 14 | CROSS-SIDE NAV AUDIO IN HI | In |
| 15 | DME AUDIO IN HI | In |
| 16 | DME AUDIO IN LO | In |
| 17 | MUSIC IN 1 LEFT | In |
| 18 | MUSIC IN 1 RIGHT | In |
| 19 | UNSWITCHED AUDIO IN 1 HI | In |
| 20 | UNSWITCHED AUDIO IN 2 HI | In |
| 21 | RESERVED | -- |
| 22 | RESERVED | -- |
| 23 | TEL MIC AUDIO OUT HI | Out |
| 24 | PASS ICS KEY* | In |
| 25 | ON-SIDE NAV AUDIO IN LO | In |
| 26 | ON-SIDE COM MIC AUDIO OUT HI | Out |
| 27 | ON-SIDE COM MIC KEY* | Out |
| 28 | PILOT MIC AUDIO IN HI | In |
| 29 | PILOT MIC KEY* IN | In |
| 30 | PILOT MIC IN LO | In |
| 31 | PILOT ICS KEY* | In |
| 32 | CROSS-SIDE COM MIC AUDIO OUT HI | Out |
| 33 | CROSS-SIDE COM MIC KEY* | Out |
| 34 | CROSS-SIDE NAV AUDIO IN LO | In |
| 35 | ADF AUDIO IN HI | In |
| 36 | ADF AUDIO IN LO | In |
| 37 | MUSIC IN 1 LO | In |

* Denotes Active Low (Ground to activate).

Table 4-1. J3471 Pin Assignments (Continued)

| Pin | Pin Name | I/O |
|------------|---------------------------------|------------|
| 38 | UNSWITCHED AUDIO IN 3 HI | In |
| 39 | UNSWITCHED AUDIO IN LO | In |
| 40 | RESERVED | -- |
| 41 | RESERVED | -- |
| 42 | TEL AUDIO IN HI | In |
| 43 | TEL AUDIO IN LO | In |
| 44 | PASS 3 MIC AUDIO IN HI | In |
| 45 | PASS 3 MIC AUDIO IN LO | In |
| 46 | PASS 1 MIC AUDIO IN HI | In |
| 47 | PASS 1 MIC AUDIO IN LO | In |
| 48 | PASS HEADSET AUDIO OUT LO | Out |
| 49 | COPILOT MIC AUDIO IN HI | In |
| 50 | COPILOT MIC KEY* IN | In |
| 51 | COPILOT MIC IN LO | In |
| 52 | COPILOT ICS KEY* | In |
| 53 | RESERVED | -- |
| 54 | ALTITUDE WARN AUDIO IN HI | In |
| 55 | ALTITUDE WARN AUDIO IN LO | In |
| 56 | MUSIC IN 2 LEFT | In |
| 57 | MUSIC IN 2 RIGHT | In |
| 58 | COM 3 AUDIO IN HI | In |
| 59 | COM 3 AUDIO LO | I/O |
| 60 | RESERVED | -- |
| 61 | RESERVED | -- |
| 62 | TEL MIC AUDIO OUT LO | Out |
| 63 | PASS 4 MIC AUDIO IN HI | In |
| 64 | PASS 4 MIC AUDIO IN LO | In |
| 65 | PASS 2 MIC AUDIO IN HI | In |
| 66 | PASS 2 MIC AUDIO IN LO | In |
| 67 | PASS HEADSET AUDIO OUT LEFT | Out |
| 68 | PASS HEADSET AUDIO OUT RIGHT | Out |
| 69 | COPILOT HEADSET AUDIO OUT LEFT | Out |
| 70 | COPILOT HEADSET AUDIO OUT RIGHT | Out |
| 71 | COPILOT HEADSET AUDIO OUT LO | Out |
| 72 | RESERVED | -- |
| 73 | RESERVED | -- |
| 74 | AUX AUDIO IN HI | In |
| 75 | AUX AUDIO IN LO | In |
| 76 | MUSIC IN 2 LO | In |
| 77 | COM 3 MIC AUDIO OUT HI | Out |
| 78 | COM 3 MIC KEY* | Out |

* Denotes Active Low (Ground to activate).

Table 4-2. J3472 Pin Assignments

| Pin | Pin Name | I/O |
|------------|-------------------------|------------|
| 1 | CONFIG MODULE GROUND | -- |
| 2 | RESERVED | -- |
| 3 | PROGRAM GROUND | -- |
| 4 | RECORDER PLAY* | In |
| 5 | PROGRAM GROUND | -- |
| 6 | RS-232 OUT 1 | Out |
| 7 | RS-232 IN 1 | In |
| 8 | RESERVED | -- |
| 9 | RESERVED | -- |
| 10 | RESERVED | -- |
| 11 | PROGRAM GROUND | -- |
| 12 | RESERVED | -- |
| 13 | RESERVED | -- |
| 14 | POWER GROUND | -- |
| 15 | RESERVED | -- |
| 16 | POWER GROUND | -- |
| 17 | COM SWAP* | In |
| 18 | PROGRAM GROUND | -- |
| 19 | RESERVED | -- |
| 20 | RESERVED | -- |
| 21 | CONFIG MODULE POWER OUT | Out |
| 22 | RESERVED | -- |
| 23 | PROGRAM GROUND | -- |
| 24 | RECORDER OFF SELECT* | In |
| 25 | PROGRAM GROUND | -- |
| 26 | AUX SOURCE SELECT* | In |
| 27 | RESERVED | -- |
| 28 | RESERVED | -- |
| 29 | RESERVED | -- |
| 30 | AIRCRAFT POWER 2 | In |
| 31 | RESERVED | -- |
| 32 | AIRCRAFT POWER 2 | In |
| 33 | RESERVED | -- |
| 34 | MIDDLE MARKER SENSE | Out |
| 35 | RESERVED | Out |
| 36 | RESERVED | -- |
| 37 | GROUND RETURN | -- |

* Denotes Active Low (Ground to activate).

Table 4-2. J3472 Pin Assignments (Continued)

| Pin | Pin Name | I/O |
|------------|----------------------------------|------------|
| 38 | RS-232 OUT 2 | Out |
| 39 | RS-232 IN 2 | In |
| 40 | CONFIG MODULE DATA | I/O |
| 41 | SPEAKER AUDIO OUT LO | Out |
| 42 | SPEAKER AUDIO OUT HI | Out |
| 43 | RESERVED | -- |
| 44 | PROGRAM GROUND | -- |
| 45 | RESERVED | -- |
| 46 | PROGRAM GROUND | -- |
| 47 | RESERVED | -- |
| 48 | RESERVED | -- |
| 49 | RESERVED | -- |
| 50 | RESERVED | -- |
| 51 | 14 V LIGHTING HI | In |
| 52 | 28 V LIGHTING HI | In |
| 53 | AIRCRAFT POWER 1 | In |
| 54 | RESERVED | -- |
| 55 | AIRCRAFT POWER 1 | In |
| 56 | RESERVED | -- |
| 57 | GROUND RETURN | -- |
| 58 | RESERVED | -- |
| 59 | MARKER ANTENNA LO | In |
| 60 | CONFIG MODULE CLOCK | Out |
| 61 | RESERVED | -- |
| 62 | RESERVED | -- |
| 63 | RESERVED | -- |
| 64 | PA MUTE* OUT | Out |
| 65 | TEL DISCRETE RINGER* | In |
| 66 | RESERVED | -- |
| 67 | PROGRAM GROUND | -- |
| 68 | RESERVED | -- |
| 69 | POWER GROUND | -- |
| 70 | RESERVED | -- |
| 71 | POWER GROUND | -- |
| 72 | RESERVED | -- |
| 73 | RESERVED | -- |
| 74 | AIRWAY/INNER MARKER EXT LAMP OUT | Out |
| 75 | MIDDLE MARKER EXT LAMP OUT | Out |
| 76 | OUTER MARKER EXT LAMP OUT | Out |
| 77 | RESERVED | -- |
| 78 | MARKER ANTENNA HI | In |

* Denotes Active Low (Ground to activate).

4.3 J3472 Connector Pin Assignments

This section covers the pin connections of J3472 only.

4.3.1 Aircraft Power and Lighting

Power Input requirements and Lighting Bus inputs are listed in the following tables. The power-input pins accept 11-33 Vdc. AIRCRAFT POWER 2 is for connecting to an alternate power source, such as on aircraft with two electrical buses. Refer to Figure C-1 for power interconnections.

Table 4-3. Aircraft Power Pin Assignments, J3472

| Pin | Pin Name | Description | I/O |
|-----|------------------|-----------------|-----|
| 53 | AIRCRAFT POWER 1 | Unit power | In |
| 55 | AIRCRAFT POWER 1 | Unit power | In |
| 30 | AIRCRAFT POWER 2 | Unit power | In |
| 32 | AIRCRAFT POWER 2 | Unit power | In |
| 69 | POWER GROUND | Aircraft ground | -- |
| 71 | POWER GROUND | Aircraft ground | -- |
| 14 | POWER GROUND | Aircraft ground | -- |
| 16 | POWER GROUND | Aircraft ground | -- |

4.3.2 Lighting Bus

The GMA 347 can be configured to track a 28 Vdc or 14 Vdc lighting bus using these inputs. Refer to Figure C-1 for lighting interconnections.

Table 4-4. Aircraft Lighting Pin Assignments, J3472

| Pin | Pin Name | Description | I/O |
|-----|------------------|-------------------------------------|-----|
| 51 | 14 V LIGHTING HI | 14V Backlighting input, 0 to 14 Vdc | In |
| 52 | 28 V LIGHTING HI | 28V Backlighting input, 0 to 28 Vdc | In |

4.3.3 RS-232 Serial Input/Output

Table 4-5. RS-232 Pin Assignments, J3472

| Pin | Pin Name | Description | I/O |
|-----|--------------|---|-----|
| 6 | RS-232 OUT 1 | Output level greater than ± 5 Volts | Out |
| 7 | RS-232 IN 1 | Input level up to ± 25 volts | In |
| 38 | RS-232 OUT 2 | Output level greater than ± 5 Volts | Out |
| 39 | RS-232 IN 2 | Input with level up to ± 25 volts | In |

The RS-232 outputs conform to EIA/TIA-232C with an output voltage swing of at least ± 5 V when driving a standard RS-232 load. The RS-232 IN/OUT 1 connections are used to upload configuration data into the unit. The unit is configured out of the aircraft, before final installation. Refer to Section 5 for configuration instructions.

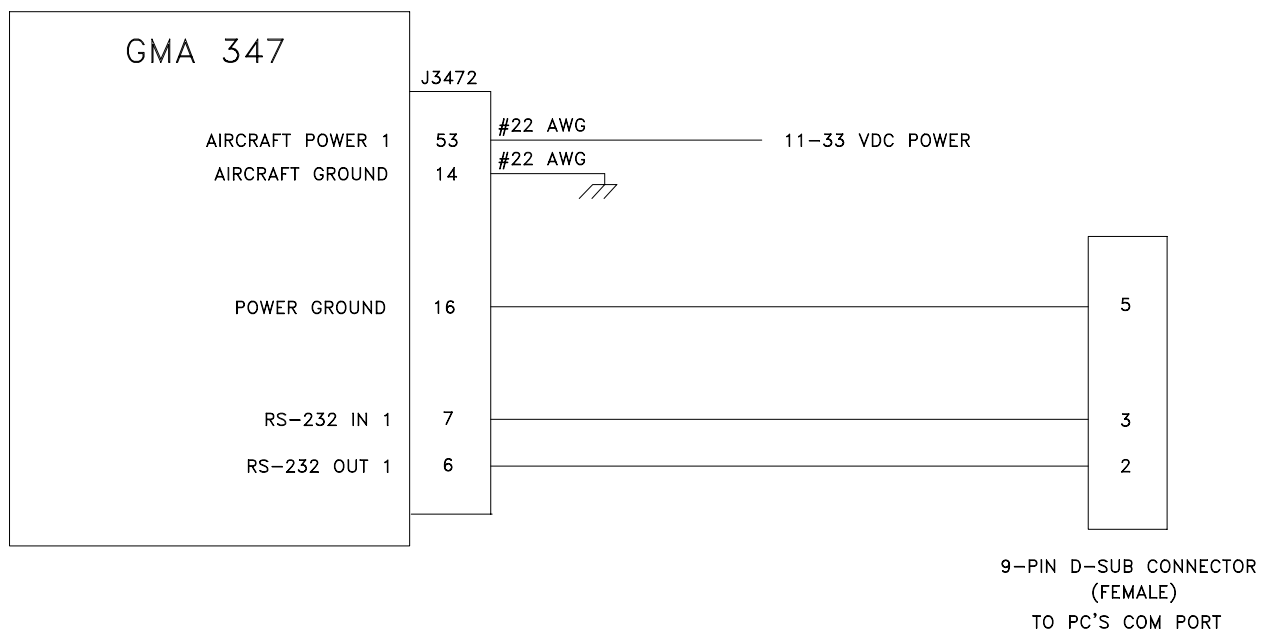


Figure 4-3. GMA 347 Configuration Upload Connections

4.3.4 Marker Beacon Functions

Marker Beacon connections are listed in the following table. The antenna input is connected to pins 78 (HI or Center Conductor) and 59 (LO or Shield).

Table 4-6. Marker Beacon Pin Assignments, J3472

| Pin | Pin Name | Description | I/O |
|-----|----------------------------------|--|-----|
| 34 | MIDDLE MARKER SENSE | 2.5-8 Vdc into 4.7 k Ω | Out |
| 74 | AIRWAY/INNER MARKER EXT LAMP OUT | MKR I-HI white 2.5-8 Vdc into 56 Ω | Out |
| 75 | MIDDLE MARKER EXT LAMP OUT | MKR M-HI amber. 2.5-8 Vdc into 56 Ω | Out |
| 76 | OUTER MARKER EXT LAMP OUT | MKR O-HI blue. 2.5-8 Vdc into 56 Ω | Out |
| 78 | MARKER ANTENNA HI | Marker antenna input, 50 Ω | In |
| 59 | MARKER ANTENNA LO | Ground reference for pin 78 | -- |

4.3.5 Installation Selection Inputs

The following table shows the Installation Selection Inputs of J3472. The selection inputs have an input and a program ground. When the input is grounded, the input function is selected.

Table 4-7. Installation Selection Inputs Pin Assignments, J3472

| Pin | Pin Name | Description | I/O |
|-----|--------------------------|---|-----|
| 4 | RECORDER PLAY* | An external pushbutton switch activates voice recorder playback. | In |
| 5 | PROGRAM GROUND | | -- |
| 17 | COM SWAP* | When enabled, COM 1 and COM 2 are swapped. This is used with a switch tied to ground for momentary operation. | In |
| 18 | PROGRAM GROUND | | -- |
| 24 | RECORDER OFF SELECT* | When enabled, the voice recorder is disabled. | In |
| 25 | PROGRAM GROUND | | -- |
| 26 | AUXILIARY SOURCE SELECT* | This input is used for an external switch tied to ground to control the auxiliary audio. | In |
| 65 | TEL DISCRETE RINGER* | This input is for use with a cellular phone with a digital output. | In |

* Denotes Active Low (Ground to activate).

4.3.6 External Configuration Module

The configuration module contains an I2C temp sensor and EEPROM. The configuration module is located in the connector backshell. The configuration module stores a backup of the unit configuration.

Table 4-8. External Configuration Module Pin Assignments, J3472

| Pin | Pin Name | Description | I/O |
|-----|-----------------------------|--|--------|
| 1 | Configuration Module Ground | Ground | -- |
| 21 | Configuration Module Power | +3.3 VDC | In |
| 40 | Configuration Module Data | Bi-directional data line | In/Out |
| 60 | Configuration Module Clock | Signal used to clock data input/output | Out |

4.3.7 Speaker

The speaker output is capable of driving up to 10 Watts into a 4 Ω or 8 Ω speaker.

Table 4-9. Speaker Pin Assignments, J3472

| Pin | Pin Name | Description | I/O |
|-----|----------------------|------------------------------------|-----|
| 41 | SPEAKER AUDIO OUT LO | Ground reference for speaker audio | -- |
| 42 | SPEAKER AUDIO OUT HI | Speaker audio output | Out |

4.3.8 PA MUTE

PA MUTE is an output that when pulled low is active. It is used to trigger the mute function on an external PA system.

Table 4-10. PA MUTE Pin Assignments, J3472

| Pin | Pin Name | Description | I/O |
|-----|--------------|----------------------------------|-----|
| 64 | PA MUTE* OUT | Output capable of sinking 500 mA | Out |

* Denotes Active Low (Ground to activate).

4.4 J3471 Connector Pin Assignments

This section covers the pin connections of J3471 only.

4.4.1 Mic Audio Inputs and Mic Keys

Table 4-11. Mic Audio Inputs and Mic Key Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|-----|-------------------------|--|-----|
| 29 | PILOT MIC KEY* IN | Enables audio into the respective transceiver unit | In |
| 50 | COPILOT MIC KEY* IN | | In |
| 28 | PILOT MIC AUDIO IN HI | Pilot Mic audio input and ground reference | In |
| 30 | PILOT MIC IN LO | | -- |
| 49 | COPILOT MIC AUDIO IN HI | Copilot Mic audio input and ground reference | In |
| 51 | COPILOT MIC IN LO | | -- |
| 46 | PASS 1 MIC AUDIO IN HI | Passenger 1 Mic audio and ground reference | In |
| 47 | PASS 1 MIC AUDIO IN LO | | -- |
| 65 | PASS 2 MIC AUDIO IN HI | Passenger 2 Mic audio and ground reference | In |
| 66 | PASS 2 MIC AUDIO IN LO | | -- |
| 44 | PASS 3 MIC AUDIO IN HI | Passenger 3 Mic audio and ground reference | In |
| 45 | PASS 3 MIC AUDIO IN LO | | -- |
| 63 | PASS 4 MIC AUDIO IN HI | Passenger 4 Mic audio and ground reference | In |
| 64 | PASS 4 MIC AUDIO IN LO | | -- |

* Denotes Active Low (Ground to activate).

4.4.2 ICS Keys

Table 4-12. ICS Key Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|-----|------------------|--|-----|
| 31 | PILOT ICS KEY* | Enables audio into the intercom system | In |
| 52 | COPILOT ICS KEY* | | In |
| 24 | PASS ICS KEY* | | In |

* Denotes Active Low (Ground to activate).

4.4.3 Com Audio and Mic Keys

Table 4-13. Com Audio and Mic Keys Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|-----|---------------------------------|--|-----|
| 27 | ON-SIDE COM MIC KEY* | Enables audio into the respective transceiver unit | In |
| 33 | CROSS-SIDE COM MIC KEY* | | In |
| 78 | COM 3 MIC KEY* | | In |
| 7 | ON-SIDE COM AUDIO IN HI | Com 1 audio input | In |
| 26 | ON-SIDE COM MIC AUDIO OUT HI | Com 1 audio output | Out |
| 8 | ON-SIDE COM AUDIO LO | Ground reference for Com 1 audio | -- |
| 12 | CROSS-SIDE COM AUDIO IN HI | Com 2 audio input | In |
| 32 | CROSS-SIDE COM MIC AUDIO OUT HI | Com 2 audio output | Out |
| 13 | CROSS-SIDE COM AUDIO LO | Ground reference for Com 2 audio | -- |
| 58 | COM 3 AUDIO HI | Com 3 audio input | In |
| 77 | COM 3 MIC AUDIO OUT HI | Com 3 audio output | Out |
| 59 | COM 3 AUDIO LO | Ground reference for Com 3 audio | -- |

* Denotes Active Low (Ground to activate).

4.4.4 Nav Audio

Table 4-14. Nav Audio Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|-----|----------------------------|------------------------|-----|
| 6 | ON-SIDE NAV AUDIO IN HI | Nav 1 audio input | In |
| 25 | ON-SIDE NAV AUDIO IN LO | Nav 1 ground reference | -- |
| 14 | CROSS-SIDE NAV AUDIO IN HI | Nav 2 audio input | In |
| 34 | CROSS-SIDE NAV AUDIO IN LO | Nav 2 ground reference | -- |

4.4.5 Headset Outputs

Table 4-15. Headset Outputs Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|-----|---------------------------------|--|-----|
| 9 | PILOT HEADSET AUDIO OUT LEFT | Pilot headset audio output | Out |
| 10 | PILOT HEADSET AUDIO OUT RIGHT | | Out |
| 11 | PILOT HEADSET AUDIO OUT LO | Ground reference for pilot headset | -- |
| 69 | COPILOT HEADSET AUDIO OUT LEFT | Copilot headset audio output | Out |
| 70 | COPILOT HEADSET AUDIO OUT RIGHT | | Out |
| 71 | COPILOT HEADSET AUDIO OUT LO | Ground reference for copilot headset | -- |
| 67 | PASS HEADSET AUDIO OUT LEFT | Passenger headset audio output | Out |
| 68 | PASS HEADSET AUDIO OUT RIGHT | | Out |
| 48 | PASS HEADSET AUDIO OUT LO | Ground reference for passenger headset | -- |

4.4.6 Music Inputs

Table 4-16. Music Inputs Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|-----|------------------|------------------------------|-----|
| 17 | MUSIC IN 1 LEFT | Music 1 input | In |
| 18 | MUSIC IN 1 RIGHT | | In |
| 37 | MUSIC IN 1 LO | Ground reference for music 1 | -- |
| 56 | MUSIC IN 2 LEFT | Music 2 input | In |
| 57 | MUSIC IN 2 RIGHT | | In |
| 76 | MUSIC IN 2 LO | Ground reference for music 2 | -- |

4.4.7 Unswitched Audio Inputs

Table 4-17. Unswitched Audio Inputs Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|-----|---------------------------|---------------------------------------|-----|
| 19 | UNSWITCHED AUDIO IN 1 HI | Unswitched audio inputs | In |
| 20 | UNSWITCHED AUDIO IN 2 HI | | In |
| 38 | UNSWITCHED AUDIO IN 3 HI | | In |
| 39 | UNSWITCHED AUDIO IN LO | Ground reference for unswitched audio | -- |
| 54 | ALTITUDE WARN AUDIO IN HI | Unmuted/unswitched input | In |
| 55 | ALTITUDE WARN AUDIO IN LO | Ground reference for altitude warning | -- |

4.4.8 Telephone I/O

Table 4-18. Telephone Inputs/Outputs Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|-----|------------------------|---|-----|
| 3 | TEL RINGER AUDIO IN HI | Ringtone audio input | In |
| 4 | TEL RINGER AUDIO IN LO | Ground reference for telephone ringer audio input | In |
| 23 | TEL MIC AUDIO OUT HI | Transmitted telephone audio output | Out |
| 62 | TEL MIC AUDIO OUT LO | Ground reference for telephone Mic audio | -- |
| 42 | TEL AUDIO IN HI | Received telephone audio input | In |
| 43 | TEL AUDIO IN LO | Ground reference for telephone input | -- |

4.4.9 AUX, DME and ADF Audio

Table 4-19. AUX, DME and ADF Audio Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|------------|-----------------|---|------------|
| 74 | AUX AUDIO IN HI | Extra switched audio input | In |
| 75 | AUX AUDIO IN LO | Ground reference for extra switched audio input | -- |
| 15 | DME AUDIO IN HI | Distance measuring equipment audio input | In |
| 16 | DME AUDIO IN LO | Ground reference for DME audio input | -- |
| 35 | ADF AUDIO IN HI | Automatic direction finder audio input | In |
| 36 | ADF AUDIO IN LO | Ground reference for automatic direction finder audio input | -- |

4.4.10 Failsafe Audio

Table 4-20. Failsafe Audio Pin Assignments, J3471

| Pin | Pin Name | Description | I/O |
|------------|-------------------------|--|------------|
| 1 | FAIL SAFE WARN AUDIO IN | Audio summed to the pilots headset left and COM 1 when power fails | In |

This page intentionally left blank

5 POST INSTALLATION CONFIGURATION AND CHECKOUT PROCEDURE

5.1 Post Installation Configuration Harness

Refer to figure 4-3 for GMA 347 Configuration Upload Connections.

5.2 Program Information

| Garmin Product | GMA 347 Configuration Tool |
|---|---------------------------------|
| Used for: | GMA 347, GMA 347H, GMA 347 2ADF |
| Program Archive | 006-A0115-00 |
| File Name | GMA_CONFIG.EXE |
| GMA_CONFIG.EXE version at time of this document | 2.02 |

5.3 GMA Configuration Tool Version

NOTE

To find the version of the GMA Configuration Tool, right click anywhere along the top of the GMA Configuration Tool window and choose “About GMA Configuration Tool”. See Figure 5-1.



Figure 5-1 About GMA Config Tool

5.4 Configuration Tool Introduction

References to the GMA 347 throughout this document apply to all versions of the GMA 347 unit types, the GMA 347, GMA 347H, and the GMA 347 2ADF.

The GMA Configuration Tool, GPN 006-A0115-00, is used to configure the GMA 347 through a PC serial port. The GMA Configuration Tool allows the ability to send updated configuration information and upload SYSTEM or BOOT BLOCK Hex file code to a GMA 347 via a PC’s RS-232 COM port. The application can also be used to query the GMA 347 for its current configuration information. Figure 5-2 shows the configurations that can be altered. Each configuration item has a SET value and an ACTIVE value. The ACTIVE value is what the unit currently has stored, and the SET value is used to change the current ACTIVE state.

The Configuration Tool program will show the Hardware Unit type as being a GMA 347, the current system Software Version, the Software Part Number, and the Product Serial Number.

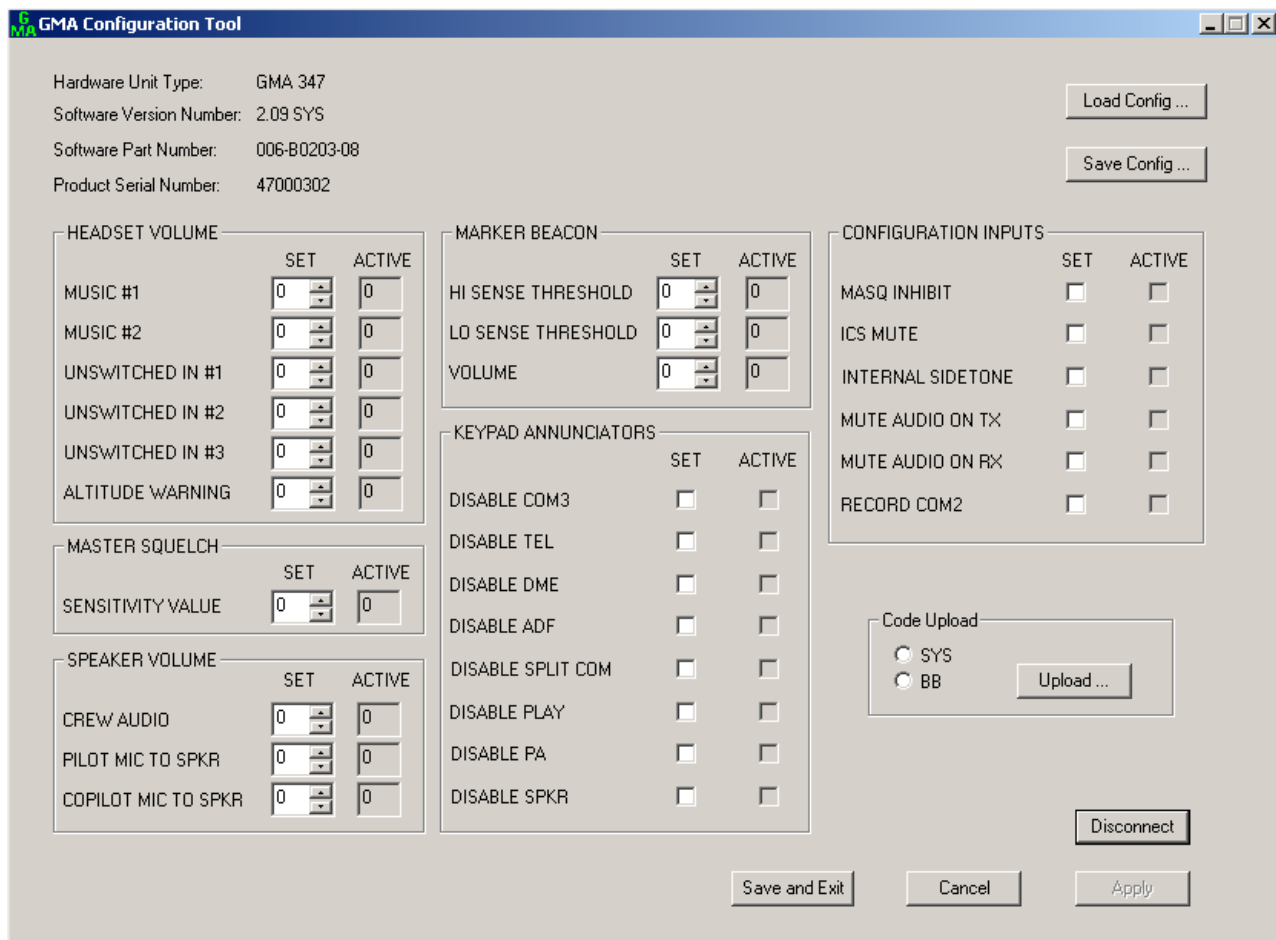


Figure 5-2 GMA Configuration Tool Screen

5.5 Connect and Disconnect Buttons

When the GMA Configuration Tool is first opened, all available COM ports will continuously be queried until a connection is made with a GMA 347 (Figure 5-3). All SET boxes will become editable and the product information will appear in place of the “No Connection” message once the initial connection is made.

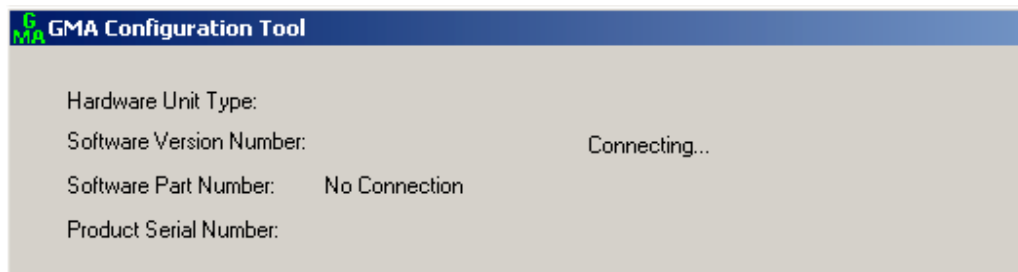


Figure 5-3 Connecting to the GMA 347

If the user presses the Disconnect button after an initial connection is made with the GMA 347, the Connect button will replace the Disconnect button. After the Connect button is pressed the application will behave similarly to initial startup in that it will continuously try to connect to a GMA 347 on COM ports 1 – 10 until successful.

If a GMA 347 is connected to the PC COM port, the Disconnect button will be visible above the Apply button. Pressing the Disconnect button causes the GMA 347 Configuration Tool to disconnect from the GMA 347 and the Connect button will have to be pressed to reconnect.

NOTE

If there is a connection between the PC and the GMA 347 and the connection gets interrupted for more than five seconds (either by loss of power to the GMA 347 or a disconnected data cable), the effect will be identical to pressing the Disconnect button.

5.5.1 Save and Exit Buttons

The Save and Exit button will apply the SET settings and will close the Configuration Tool.

5.5.2 Cancel Button

The Cancel button will NOT apply the SET settings and will close the Configuration Tool.

5.5.3 Apply Button

The Apply button will apply the SET settings and the Configuration Tool will remain open.

5.5.4 Upload Button

The Upload button is used to perform a system or boot block code upload.

5.5.5 Load Config and Save Config Buttons

The Load Config option will load settings from a configuration file into the GMA 347. The data format of the config file is shown in the CONFIG EXAMPLE at the end of this document. The config file format should never be changed, only the values that follow the equals (=) signs.

If values entered are not valid as specified in the VALID DATA RANGES section at the end of this document, the incorrect value will be replaced with a default value.

For options that have a data range of -31 to 31 the Load Config operation will accept a two digit number with or without a negative sign (Ex.... -15, 15). If characters are entered after a number (i.e. 8c), the 8 will be the only value output to the application's window. If only characters are entered, a zero (0) will be output to the display for that value.

For options that use a 0 or 1 for the config, a 0 represents NOT SET, and a 1 represents that the option will be SET.

The Save Config button queries the GMA 347 for the current config values, then stores those values in a ".ini" file regardless of whether or not the SET box is different than the ACTIVE box. The default file type is ".ini". When saving the config file leave the file type as ".ini". This will make it easier when loading the Config using the Load Config button (since the file type is defaulted to ".ini").

5.6 Configuration Tool Settings

5.6.1 Numeric Adjustments

Volume and threshold levels can be adjusted from -31 to +31. To change the level use the computer mouse and click in the “SET” field to be modified, enter a number within the range and hit the enter key. Or, use the mouse and click the up or down arrow in the field to change the value. After changing a value, click the Apply button at the bottom right corner of the GMA 347 Configuration Tool. After clicking the Apply button, the “ACTIVE” field will be updated to show the current settings.

5.6.2 Configuration Settings

Clicking in the “SET” field of an enable/disable (checkbox) option will modify the option. The configuration of the enable/disable item will become “ACTIVE” in the unit upon clicking the Apply button. Modifying a numeric value in the “SET” field and clicking the Apply button will make the numeric value “ACTIVE” in the unit

5.6.3 Configuration Options

Each setting will have a SET value and an ACTIVE value shown on the GMA 347 Configuration Tool. The SET values can be altered. The ACTIVE values represent the value that the unit currently has stored.

5.6.4 Headset Volume

| | |
|------------------|---|
| MUSIC #1 | Volume adjustments can be made by adjusting the volume up or down for each of the listed audio selections. Increasing the number will increase the volume and decreasing the number will decrease the volume. |
| MUSIC #2 | |
| UNSWITCHED IN #1 | |
| UNSWITCHED IN #2 | |
| UNSWITCHED IN #3 | |
| ALTITUDE WARNING | |

5.6.5 Master Squelch

| | |
|-------------------|---|
| SENSITIVITY VALUE | The sensitivity level of the Master Squelch can be adjusted up or down. Increasing the number will increase the receiver sensitivity (decrease the amount of audio required to break squelch). Decreasing the number will decrease the receiver sensitivity (increase the amount of audio required to break squelch). |
|-------------------|---|

5.6.6 Speaker Volume

| | |
|---------------------|---|
| CREW AUDIO | Volume adjustments can be made by adjusting the volume up or down. Increasing the number will increase the volume and decreasing the number will decrease the volume. |
| PILOT MIC TO SPKR | Volume adjustments can be made by adjusting the volume up or down. Increasing the number will increase the volume and decreasing the number will decrease the volume. |
| COPILOT MIC TO SPKR | |

5.7 Marker Beacon

| | |
|--------------------|---|
| HI SENSE THRESHOLD | Both High and Low sensitivity threshold numbers can be adjusted up or down. Increasing the number will decrease the threshold required for a lamp on condition. Decreasing the number will increase the threshold required for a lamp on condition. |
| LO SENSE THRESHOLD | |
| VOLUME | Volume adjustments can be made by adjusting the volume up or down. Increasing the number will increase the volume and decreasing the number will decrease the volume. |

5.8 Keypad Annunciators

| | |
|-------------------|---|
| DISABLE COM3 | Each of the following keys can be disabled so that pushing the associated button will do nothing. |
| DISABLE TEL | |
| DISABLE DME | |
| DISABLE ADF | |
| DISABLE SPLIT COM | |
| DISABLE PLAY | |
| DISABLE PA | |
| DISABLE SPKR | |

5.9 Configuration Inputs

| | |
|-------------------|--|
| MASQ INHIBIT | Setting this option will turn off the Master Squelch. |
| ICS MUTE | Setting this option will mute Music 1 during ICS activity. |
| INTERNAL SIDETONE | Setting this option will provide sidetone for installations using transceivers that do not provide sidetone. |
| MUTE AUDIO ON TX | Setting this option will mute all secondary COM audio when transmitting audio on the primary COM. |
| MUTE AUDIO ON RX | Setting this option will mute all secondary COM audio when receiving audio on the primary COM. |
| RECORD COM2 | Setting this option will record COM 2 audio on the voice recorder when the unit is in Split COM mode. |

5.10 Code Upload

To upload code, first select the type of code to be loaded into the unit. SYS is SYSTEM code and BB is BOOT BLOCK code. If no selection is made by using the mouse to select a radio button and “Upload” is selected, Figure 5-4 will appear to indicate a selection must be made to specify the code type to be loaded.



Figure 5-4 Radio Button Not Chosen and Upload Selected

After selecting the type of code to load, Figure 5-5 will open for the Hex file of the software to be selected.

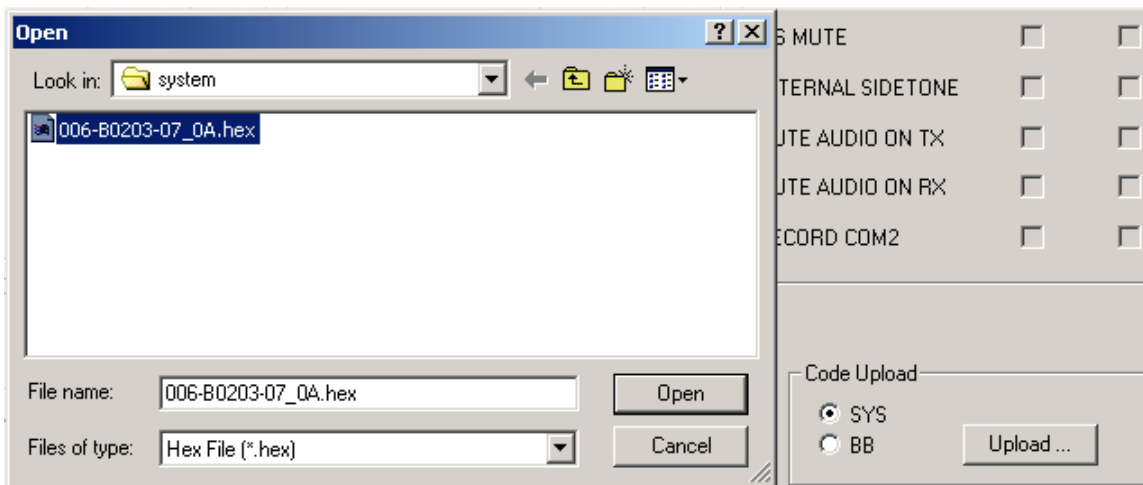


Figure 5-5 File Selection

Select the Hex file to upload and click on Open. If boot code is selected while attempting to do a system code upload, Figure 5-6 will warn about the possible user error. Clicking cancel will allow the correct Hex file to be selected.



Figure 5-6 Wrong Hex File Selected (Selecting Boot Code for System Code Upload)

If system code is selected for a boot block upload, Figure 5-7 will warn that the wrong hex file has been selected.



Figure 5-7 Wrong Hex File Selected (Selecting System Code for Boot Code Upload)

Selecting the correct Hex file and clicking Open will start the code upload. After the correct Hex file is selected, Figure 5-8 will open with the title “Erasing Flash...”. In approximately 20 seconds the window displayed in Figure 5-8 will turn into the window displayed in Figure 5-9. The “Uploading Flash...” window shows the percentage of code uploaded, the time remaining, and the time elapsed

Flash being erased

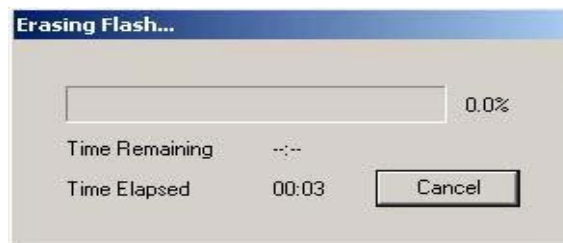


Figure 5-8 Erasing Flash

Code Upload window after flash has been erased



Figure 5-9 Uploading Flash

If the Cancel button is clicked while the code is being uploaded, Figure 5-10 will warn that a code upload is in progress. Click No to resume the code upload. Click Yes to cancel the code upload.

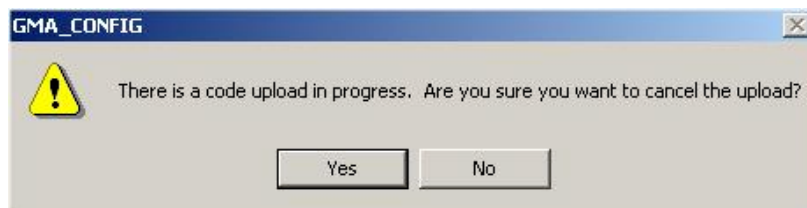


Figure 5-10 Canceling a Code Upload

If the code upload is cancelled, Figure 5-11 will show that the code upload failed.

NOTE

If this failure occurs DO NOT turn the unit power off. Reselect the code to be uploaded and attempt the code upload again.



Figure 5-11 Code Upload Failed

When the code upload is finished, Figure 5-12 will appear to indicate code upload completion.



Figure 5-12 Code Upload Complete

5.11 Configuration Example

```
hs_music1_vol=0
hs_music2_vol=0
hs_unswch1_vol=0
hs_unswch2_vol=0
hs_unswch3_vol=0
hs_altwarn_vol=0
spkr_crew_vol=0
mkr_vol=0
dsbl_spkr=0
pil_mic_vol=0
cop_mic_vol=0
master_sql_level=0
lo_sens_thrd=0
hi_sens_thrd=0
masq_inht=0
ics_mute=0
intl_sidetone=0
dsbl_play=0
dsbl_pa=0
mute_tx=0
mute_rx=0
dsbl_split_com=0
rec_com2=0
dsbl_com3=0
dsbl_tel=0
dsbl_dme=0
dsbl_adf=0
```

5.12 Valid Data Ranges

| DESCRIPTION | VALID DATA |
|----------------------------------|------------|
| Headset music 1 volume | -31 – 31 |
| Headset music 2 volume | -31 – 31 |
| Headset unswitched 1 volume | -31 – 31 |
| Headset unswitched 2 volume | -31 – 31 |
| Headset unswitched 3 volume | -31 – 31 |
| Headset altitude warning volume | -31 – 31 |
| Speaker crew audio volume | -31 – 31 |
| Headset marker beacon volume | -31 – 31 |
| Disable speaker | 0 or 1 |
| Pilot mic to speaker volume | -31 – 31 |
| CoPilot mic to speaker volume | -31 – 31 |
| Master squelch sensitivity level | -31 – 31 |
| LO sense threshold | -31 – 31 |
| HI sense threshold | -31 – 31 |
| MASQ inhibit | 0 or 1 |
| ICS mute | 0 or 1 |
| Select internal sidetone | 0 or 1 |
| Disable play | 0 or 1 |
| Disable PA | 0 or 1 |
| Mute audio on TX | 0 or 1 |
| Mute audio on RX | 0 or 1 |
| Disable split com | 0 or 1 |
| Select to record COM 2 | 0 or 1 |
| Disable COM3 annunciator | 0 or 1 |
| Disable TEL annunciator | 0 or 1 |
| Disable DME annunciator | 0 or 1 |
| Disable ADF annunciator | 0 or 1 |

APPENDIX A CERTIFICATION DOCUMENTS

A.1 Airworthiness Approval

Airworthiness approval of the GMA 347 may be acquired by the use of FAA Form 337. The following is provided as sample wording for Form 337, when replacing an existing audio panel with a Garmin GMA 347 Audio Panel. Modify appropriately for new installations.

Removed the existing [model] audio panel and replaced with a Garmin GMA 347 Audio Panel and Marker Beacon, P/N 010-00275-xx in [aircraft location].

The GMA 347 is FAA TSO Approved to C50c and C35d Class A. The GMA 347 meets RTCA DO-160D environmental qualifications for this installation. See Section 1 of the GMA 347 Installation Manual.

Installed in accordance with the Garmin GMA 347 Installation Manual 190-00325-01, Revision [], and AC 43.13-2, Chapters 2, and 3.

The GMA 347 interfaces with existing aircraft radios per the Installation Manual instructions. The Installation Manual provides detailed installation instructions and wiring diagrams (Sections 2, 3, and 4 and Appendices B and C).

Power is supplied to the GMA 347 through an existing [AUDIO 5] 5-Amp circuit breaker that was previously used by the existing audio panel. The net electrical load is unchanged.

Aircraft equipment list, weights and balance amended. Compass compensation checked and found to conform to applicable regulations.

A.2 Continued Airworthiness

Maintenance of the GMA 347 is “on condition” only. Refer to the GMA 347 Maintenance Manual (Garmin P/N 190-00325-02). Periodic maintenance of the GMA 347 is not required.

The following sample Instructions for Continued Airworthiness (ICA) provides assistance in preparing ICA for the Garmin GMA 347 unit installation as part of an FAA Type Certificate (TC) or Supplemental Type Certificate (STC) project, to comply with 14 CFR §§23.1529 and 25.1529, “Instructions for Continued Airworthiness”.

Items that may vary by aircraft make and model are shown in braces (“[]”) and should be filled in as appropriate. Some of the checklist items do not apply, in which case they should be marked “N/A” (Not Applicable).

Instructions For Continued Airworthiness, Garmin GMA 347 Audio Panel In An [Aircraft Make And Model]

1. Introduction

[Aircraft that has been altered: Registration (N-) number, Make, Model and Serial Number]

Content, Scope,

Purpose and Arrangement: This document identifies the Instructions for Continued Airworthiness for a Garmin GMA 347 installed in an [aircraft make and model].

Applicability: Applies to a Garmin GMA 347 installed in an [aircraft make and model].

Definitions/Abbreviations: None, N/A.

Precautions: None, N/A.

Units of Measurement: None, N/A.

Referenced Publications: Garmin GMA 347 Audio Panel Installation Manual, P/N 190-00325-01
Garmin GMA 347 Audio Panel Maintenance Manual, P/N 190-00325-02
Garmin GMA 347 Audio Panel Pilot's Guide, P/N 190-00325-00
STC/TC # [applicable STC/TC number for the specific aircraft installation]

Distribution: This document should be a permanent aircraft record.

2. Description of the System

Garmin GMA 347 Audio Panel with interface to external transceivers and [include other equipment/systems as appropriate]. Refer to Appendix C and Figures C-1 through C-5 of this manual for interconnect information. Refer to aircraft manufacturer approved interconnect for actual installation. Marker Beacon antenna installation, removal and replacement should be in accordance with applicable provisions of AC 43.13-1B and AC 43.13-2A.

3. Control, Operation Information

Refer to the GMA 347 Audio Panel Pilot's Guide, P/N 190-00325-00.

4. Servicing Information

N/A

5. Maintenance Instructions

Maintenance of the GMA 347 Audio Panel is 'on condition' only. Periodic maintenance is not required. Refer to the GMA 347 Audio Panel Maintenance Manual.

6. Troubleshooting Information

Refer to the GMA 347 Audio Panel Maintenance Manual.

7. Removal and Replacement Information

Refer to Sections 2 and 3 of the GMA 347 Audio Panel Installation Manual. If the unit is removed and reinstalled, a functional check of the equipment should be conducted.

8. Diagrams

Refer to Appendices B and C of the GMA 347 Audio Panel Installation Manual for installation drawings and interconnect examples.

9. Special Inspection Requirements

N/A

10. Application of Protective Treatments

N/A

11. Data: Relative to Structural Fasteners

GMA 347, antenna and appropriate mounting hardware installation, removal and replacement should be in accordance with applicable provisions of AC 43.13-1B and AC 43.13-2A.

12. Special Tools

N/A

13. This Section is for Commuter Category Aircraft Only

A. Electrical loads: Refer to Sections 1 and 4 of the GMA 347 Audio Panel Installation Manual.

B. Methods of balancing flight controls: N/A.

C. Identification of primary and secondary structures: N/A.

D. Special repair methods applicable to the airplane: Antenna installation, removal, and replacement should be in accordance with applicable provisions of AC 43.13-1B and AC 43.13-2A.

14. Overhaul Period

No additional overhaul time limitations.

15. Airworthiness Limitation Section

N/A.

A.3 Environmental Qualification Form, GMA 347 Audio Panel

The following pages are copies of the Environmental Qualification Forms for the Garmin GMA 347 Audio Panel (005-00155-79), provided for reference only.

GMAX347 Environmental Qualification Form

Nomenclature:

GMAX347 Audio Panel

Type/Model/Part Number:

GMA347 GPN 010-00275-() includes 011-00807-()

GMA1347 GPN 010-00276-() includes 011-00809-()

TSO/JTSO Number:

TSO-C35d Class A

TSO-C50c

Manufacturer's Specification And/Or Other Applicable Specification:

004-00146-00

Manufacturer:

Garmin Ltd. or its subsidiaries

Address:

1200 East 151st Street

Olathe, Kansas 66062

U.S.A.

| RTCA DO-160D Conditions | DO-160D Section and Date of Issue | Description of Conducted Tests |
|---|---|---|
| Temperature and Altitude Ground Survival Low/Operating Low Ground Survival High/Short-Time Operating High Operating Temperature High In-Flight Loss of Cooling Altitude Decompression Overpressure | 4.0 4.5.1 4.5.2 4.5.3 4.5.4 4.6.1 4.6.2 4.6.3 (Issued 07/29/97) | Equipment tested to Categories A 2 B 2 F 1 Not Applicable – Cooling Not Required. |
| Temperature Variation | 5.0 (Issued 07/29/97) | Equipment tested to Category B |
| Humidity | 6.0 (Issued 07/29/97) | Equipment tested to Category A |
| Operational Shocks & Crash Safety Sustained Crash Safety | 7.0 7.3.2 (Issued 07/29/97) | Equipment tested to Category B Equipment Tested to Aircraft Type 5, Test Type R |
| Vibration | 8.0 (Change No. 1 Issued 12/14/2000) | Equipment tested to Category S, Test Curve M, and Category S2, Test Curve B2 (See Note 1) |

Figure A-1. GMA 347 Environmental Qualification Form (Sheet 1 of 3)

| | | |
|---|---|---|
| Explosion Proofness | 9.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |
| Waterproofness | 10.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |
| Fluids Susceptibility | 11.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |
| Sand and Dust | 12.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |
| Fungus Resistance | 13.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |
| Salt Spray | 14.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |
| Magnetic Effect | 15.0 (Issued 07/29/97) | Equipment tested to Category Z |
| Power Input | 16.0 (Change No. 2 Issued 6/12/2001) | Equipment tested to Categories BZ |
| Voltage Spike | 17.0 (Issued 07/29/97) | Equipment tested to Category A |
| Audio Frequency Conducted Susceptibility — Power Inputs | 18.0 (Change No. 2 Issued 6/12/2001) | Equipment tested to Categories BZ |
| Induced Signal Susceptibility | 19.0 (Issued 07/29/97) | Equipment tested to Category A |
| Radio Frequency Susceptibility (Radiated and Conducted) | 20.0 (Change No. 1 Issued 12/14/2000) | Equipment tested to Category T (See Note 3) |
| Emission of Radio Frequency Energy | 21.0 (Issued 07/29/97) | Equipment tested to Category B |
| Lightning Induced Transient Susceptibility | 22.0 (Change No. 3 Issued 12/05/2002) | Equipment tested to Categories A Z X X X (See Note 2) |
| Lightning Direct Effects | 23.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |
| Icing | 24.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |
| Electrostatic Discharge (ESD) | 25.0 (Issued 07/29/97) | Equipment identified as Category X, no test performed |

Notes and Remarks:

- Vibration Test Curve M was increased as follows: 0.1 inches pk-pk double amplitude from 15Hz to 17Hz and 1.5g pk from 17Hz to 55Hz.
- Power Input pins tested to level A2. Reversionary Mode pins tested to level A3. All other pins tested to level A1. All pins relevant to Failsafe operation tested to level A1 with the UUT in Failsafe mode (i.e. power removed). Configuration Module and unused (spare) pins were not tested.

Qualification to additional levels and configurations has been shown as follows:

Garmin Report 005-00291-00 G1000 SHIELD BLOCK QUALIFICATION

This report shows that all part numbers on this EQF, when installed and configured as per this report, may substitute a Shield Block in place of a SPIDER.

Figure A-1. GMA 347 Environmental Qualification Form (Sheet 2 of 3)

Garmin Report 005-00265-12 HIRF and Lightning Test Plan, GFC 700

Garmin Report 005-00265-31 HIRF and Lightning TSO Report, GFC 700

The above two reports show that all part numbers on this EQF, when installed and configured as per these reports, comply with FAA Special Conditions as indicated in these reports. The units pass the stated pass/fail criterion when tested as stated in the reports to radiated and conducted susceptibility category W.

3. Qualification to additional levels and configurations has been shown as follows:

Garmin Report 005-00291-00 G1000 SHIELD BLOCK QUALIFICATION

This report shows that all part numbers on this EQF, when installed and configured as per this report, may substitute a Shield Block in place of a SPIDER.

Figure A-1. GMA 347 Environmental Qualification Form (Sheet 3 of 3)

APPENDIX B ASSEMBLY AND INSTALLATION DRAWINGS


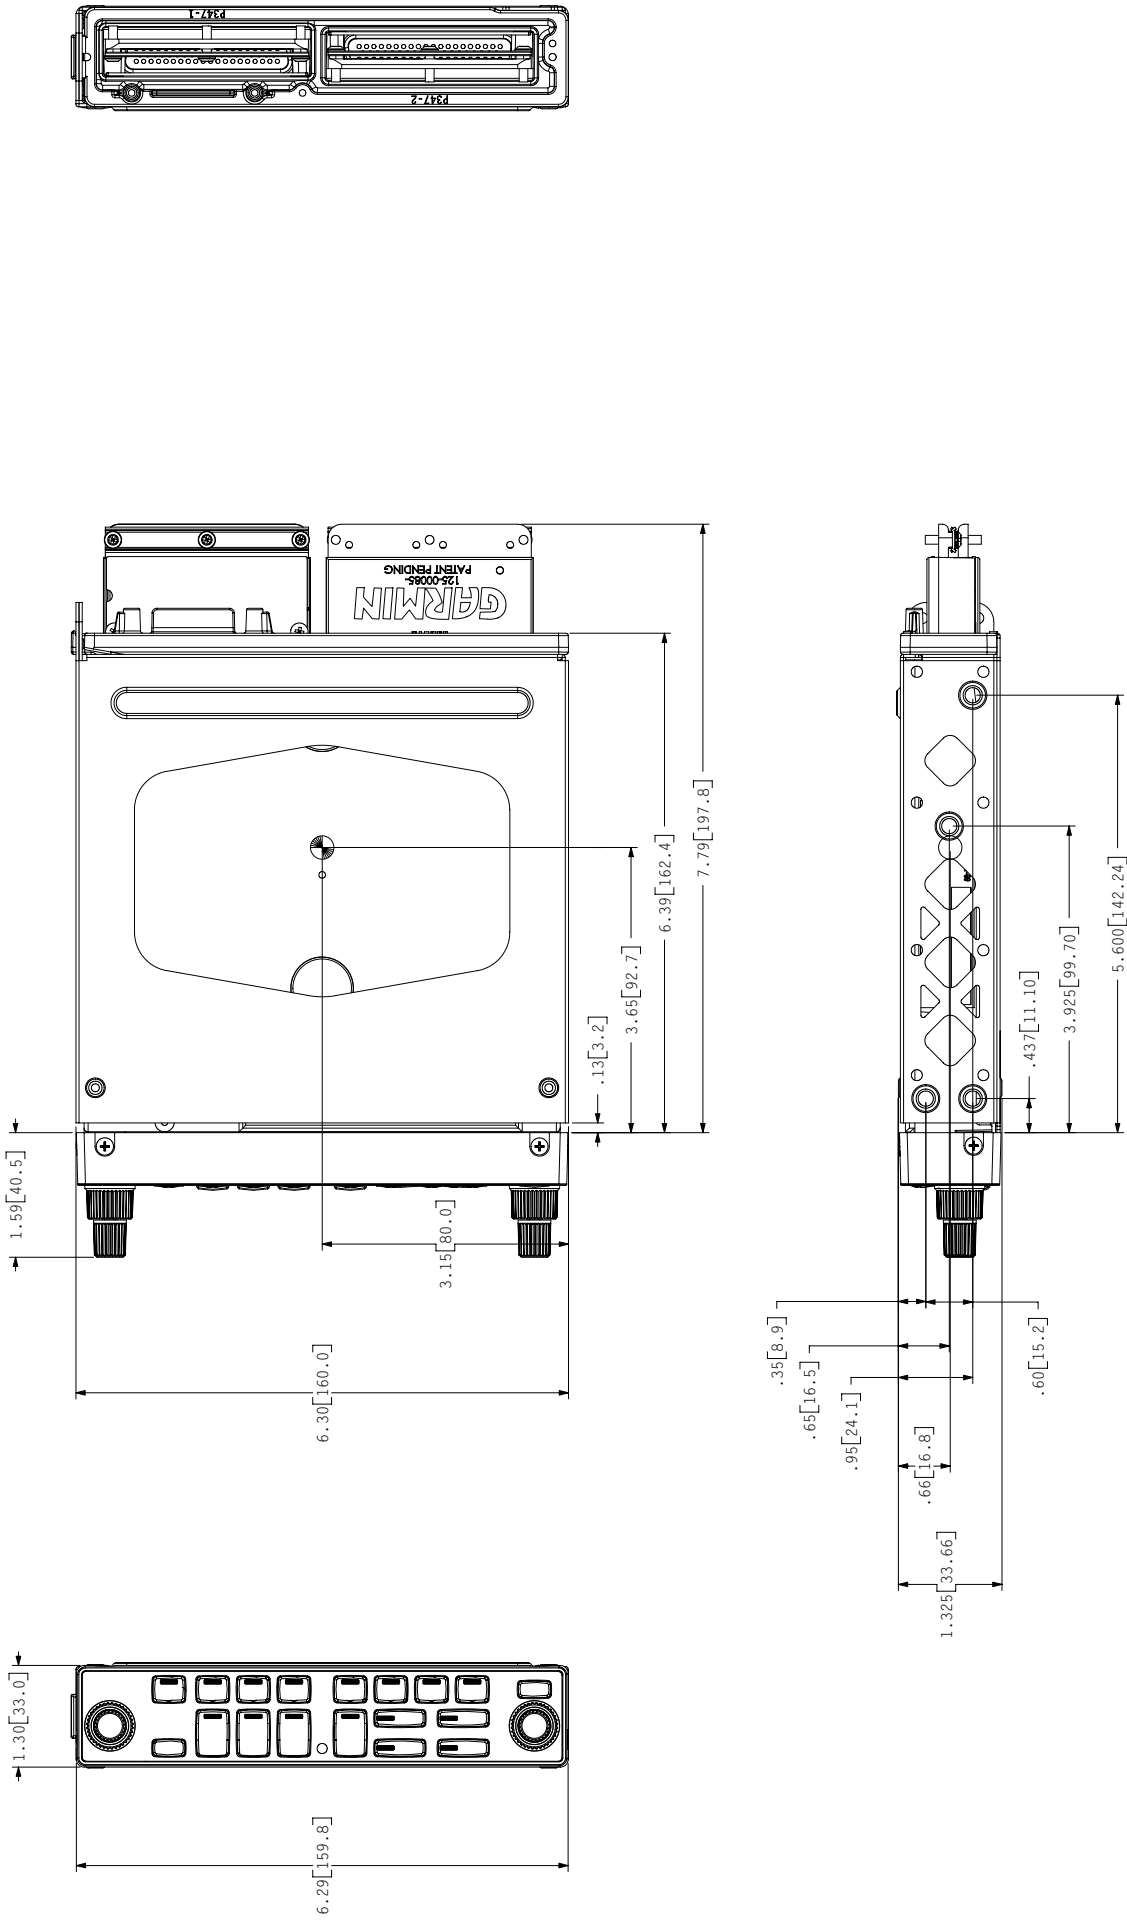


Figure B-1. GMA 347 Outline Drawing


APPENDIX B ASSEMBLY AND INSTALLATION DRAWINGS

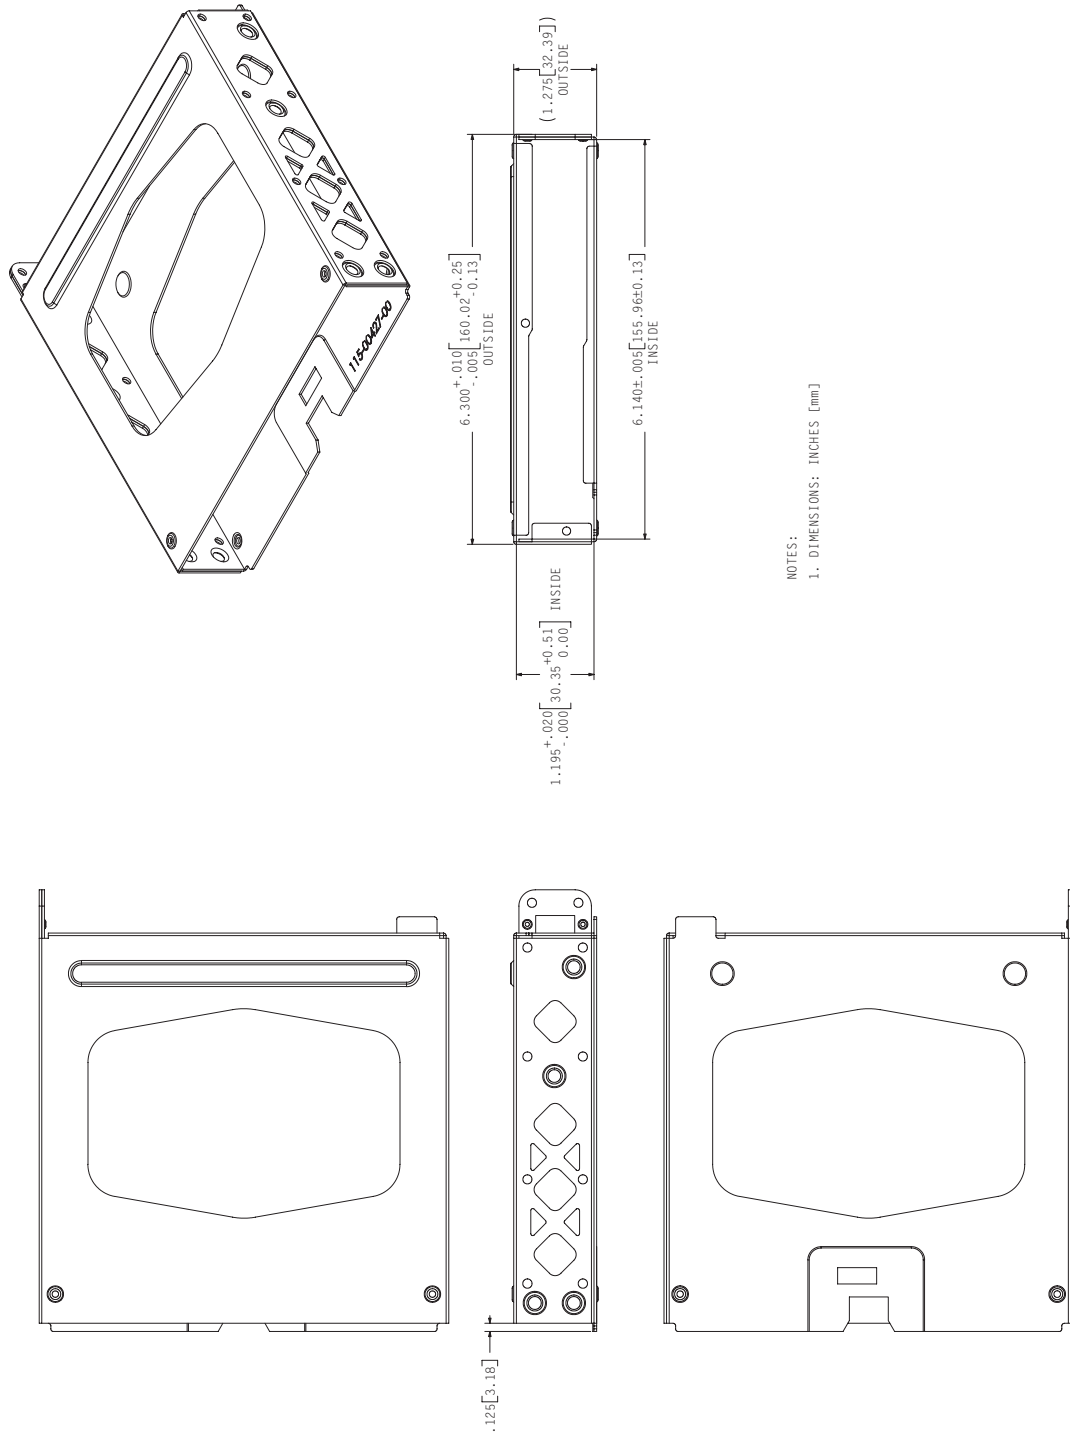

NOTES:
1. DIMENSIONS: INCHES [mm]

Figure B-2. GMA 347 Rack Dimensions (115-00427-00)


APPENDIX B ASSEMBLY AND INSTALLATION DRAWINGS

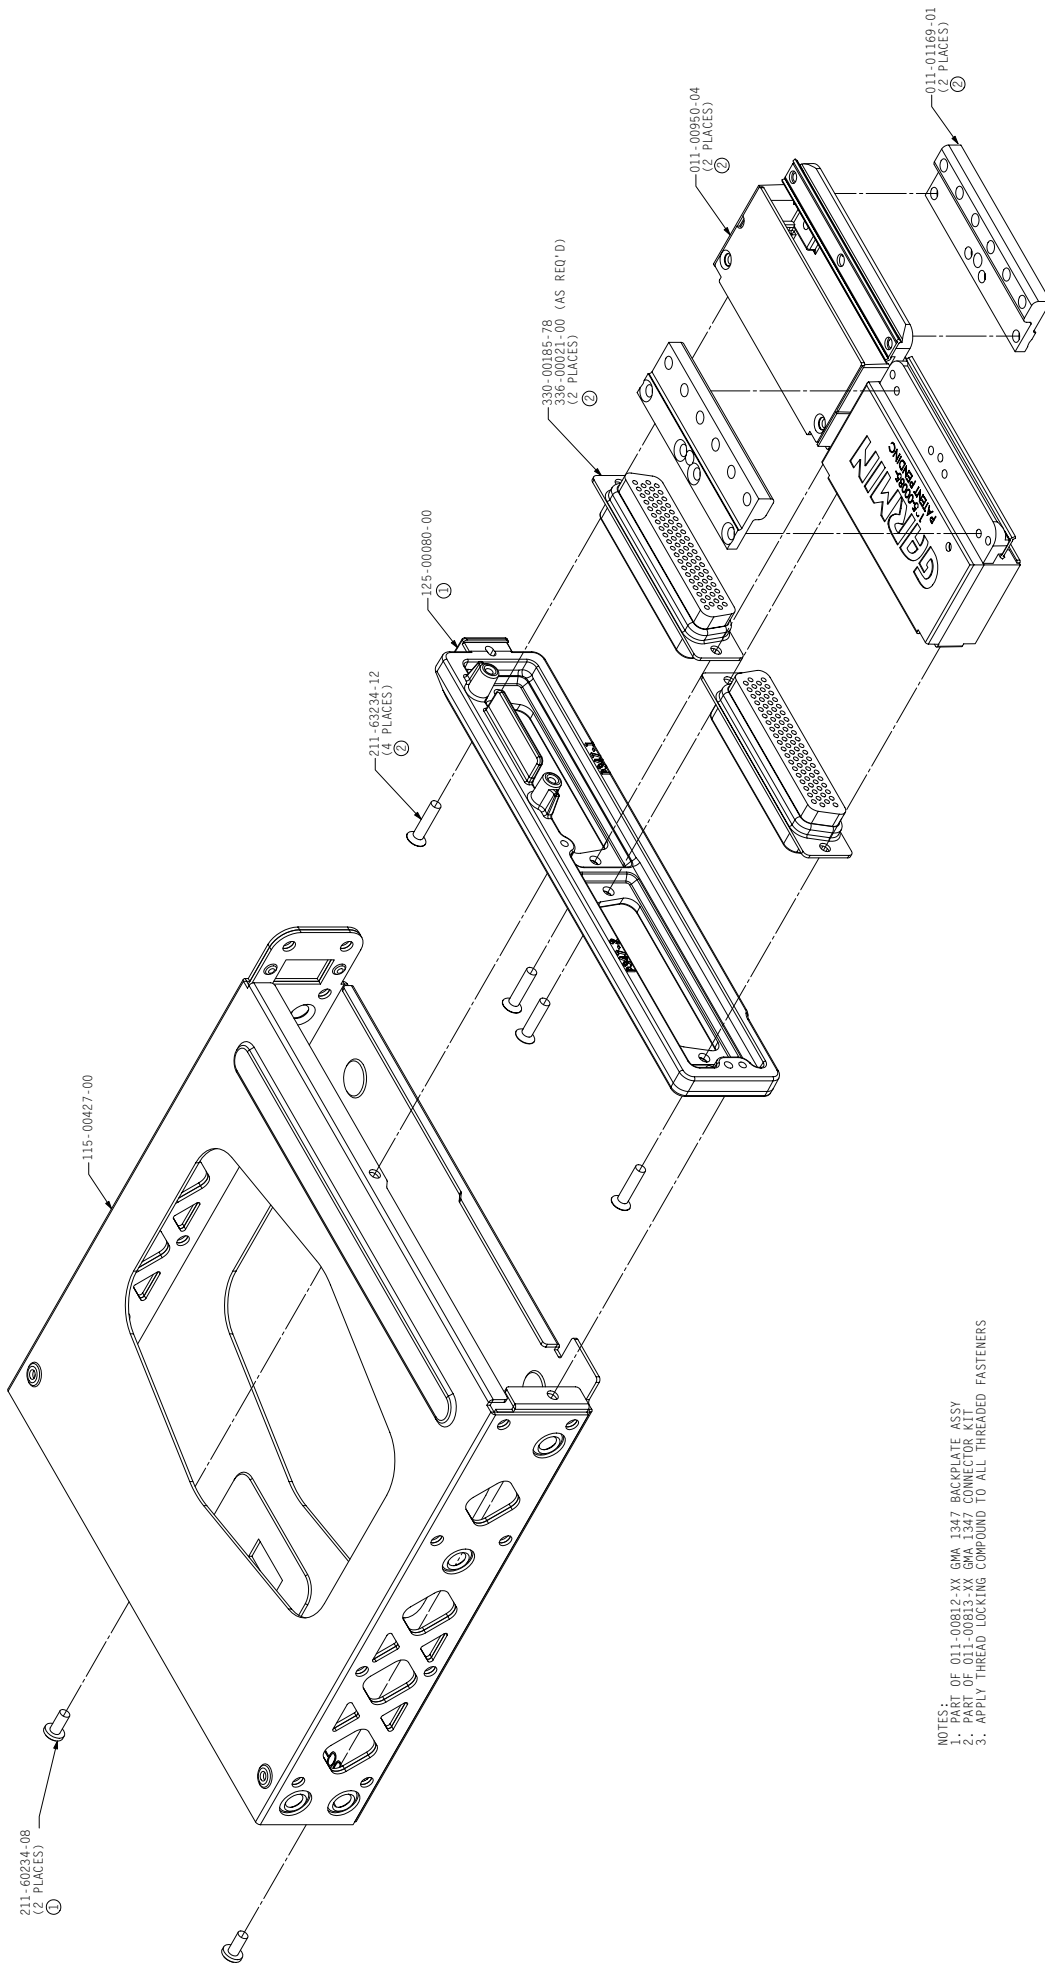

NOTES:
 1. PART OF 011-00812-XX GMA 1347 BACKPLATE ASSY
 2. PART OF 011-00813-XX GMA 1347 CONNECTOR KIT
 3. APPLY THREAD LOCKING COMPOUND TO ALL THREADED FASTENERS

Figure B-3. GMA 347 Connector/Rack Assembly Drawing

APPENDIX C INTERCONNECT DRAWINGS

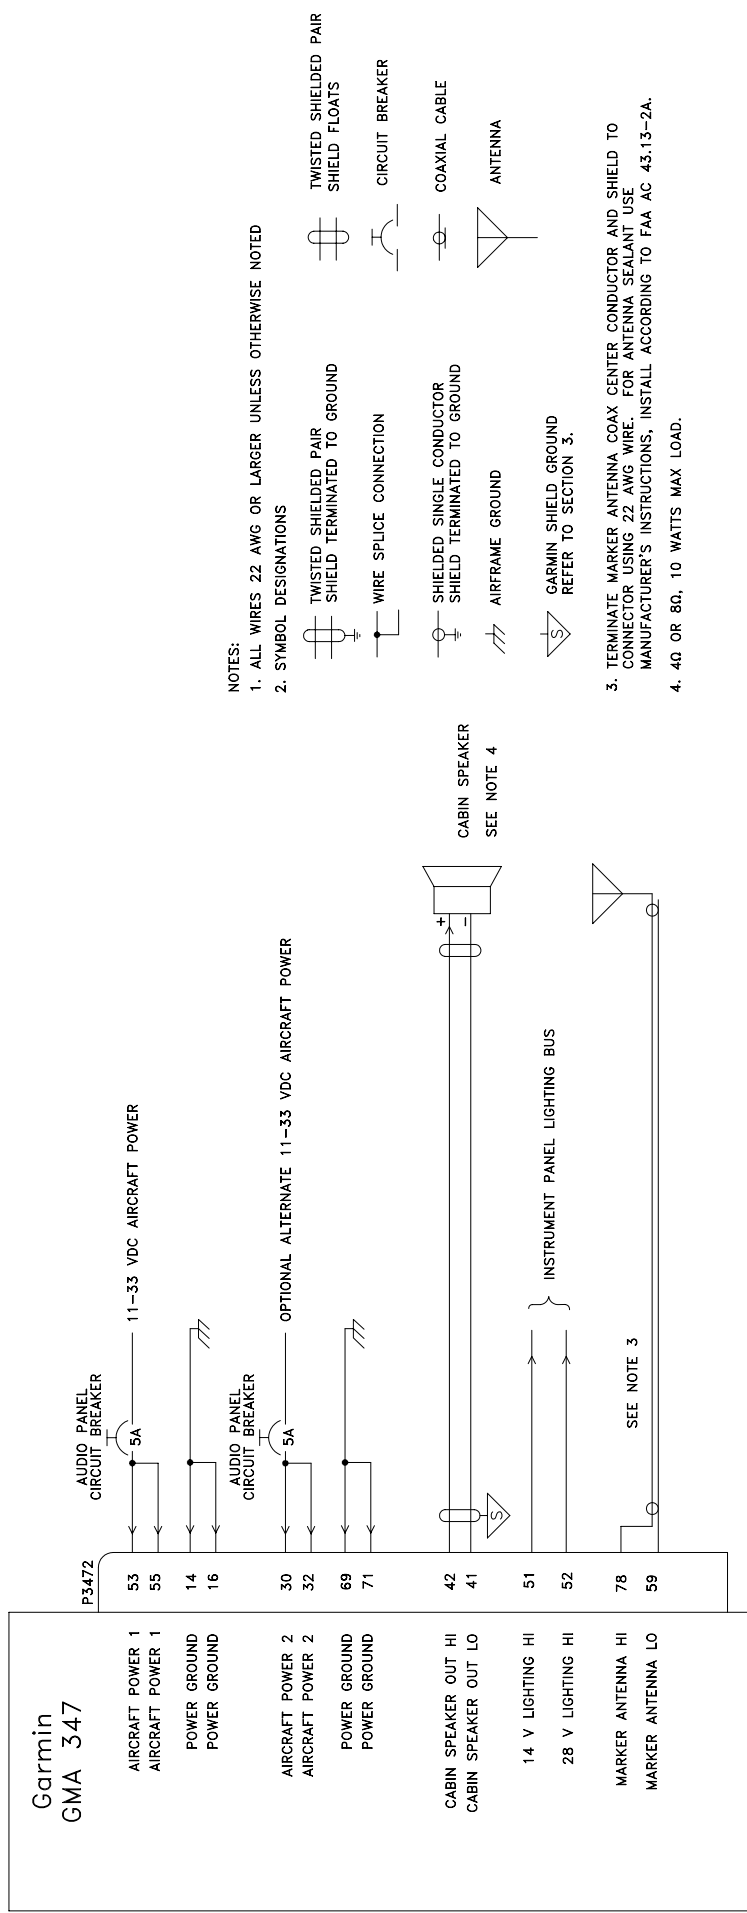

- NOTES:
- ALL WIRES 22 AWG OR LARGER UNLESS OTHERWISE NOTED
 - SYMBOL DESIGNATIONS
 - TWISTED SHIELDED PAIR SHIELD TERMINATED TO GROUND
 - TWISTED SHIELDED PAIR SHIELD FLOATS
 - WIRE SPLICE CONNECTION
 - SHIELDED SINGLE CONDUCTOR SHIELD TERMINATED TO GROUND
 - AIRFRAME GROUND
 - GARMIN SHIELD GROUND REFER TO SECTION 3.
 - TERMINATE MARKER ANTENNA COAX CENTER CONDUCTOR AND SHIELD TO CONNECTOR USING 22 AWG WIRE. FOR ANTENNA SEALANT USE MANUFACTURER'S INSTRUCTIONS, INSTALL ACCORDING TO FAA AC 43.13-2A.
 - 40 OR 80, 10 WATTS MAX LOAD.

Figure C-1. GMA 347 Power, Antenna and Speaker Interconnect Wiring Diagram

APPENDIX C INTERCONNECT DRAWINGS


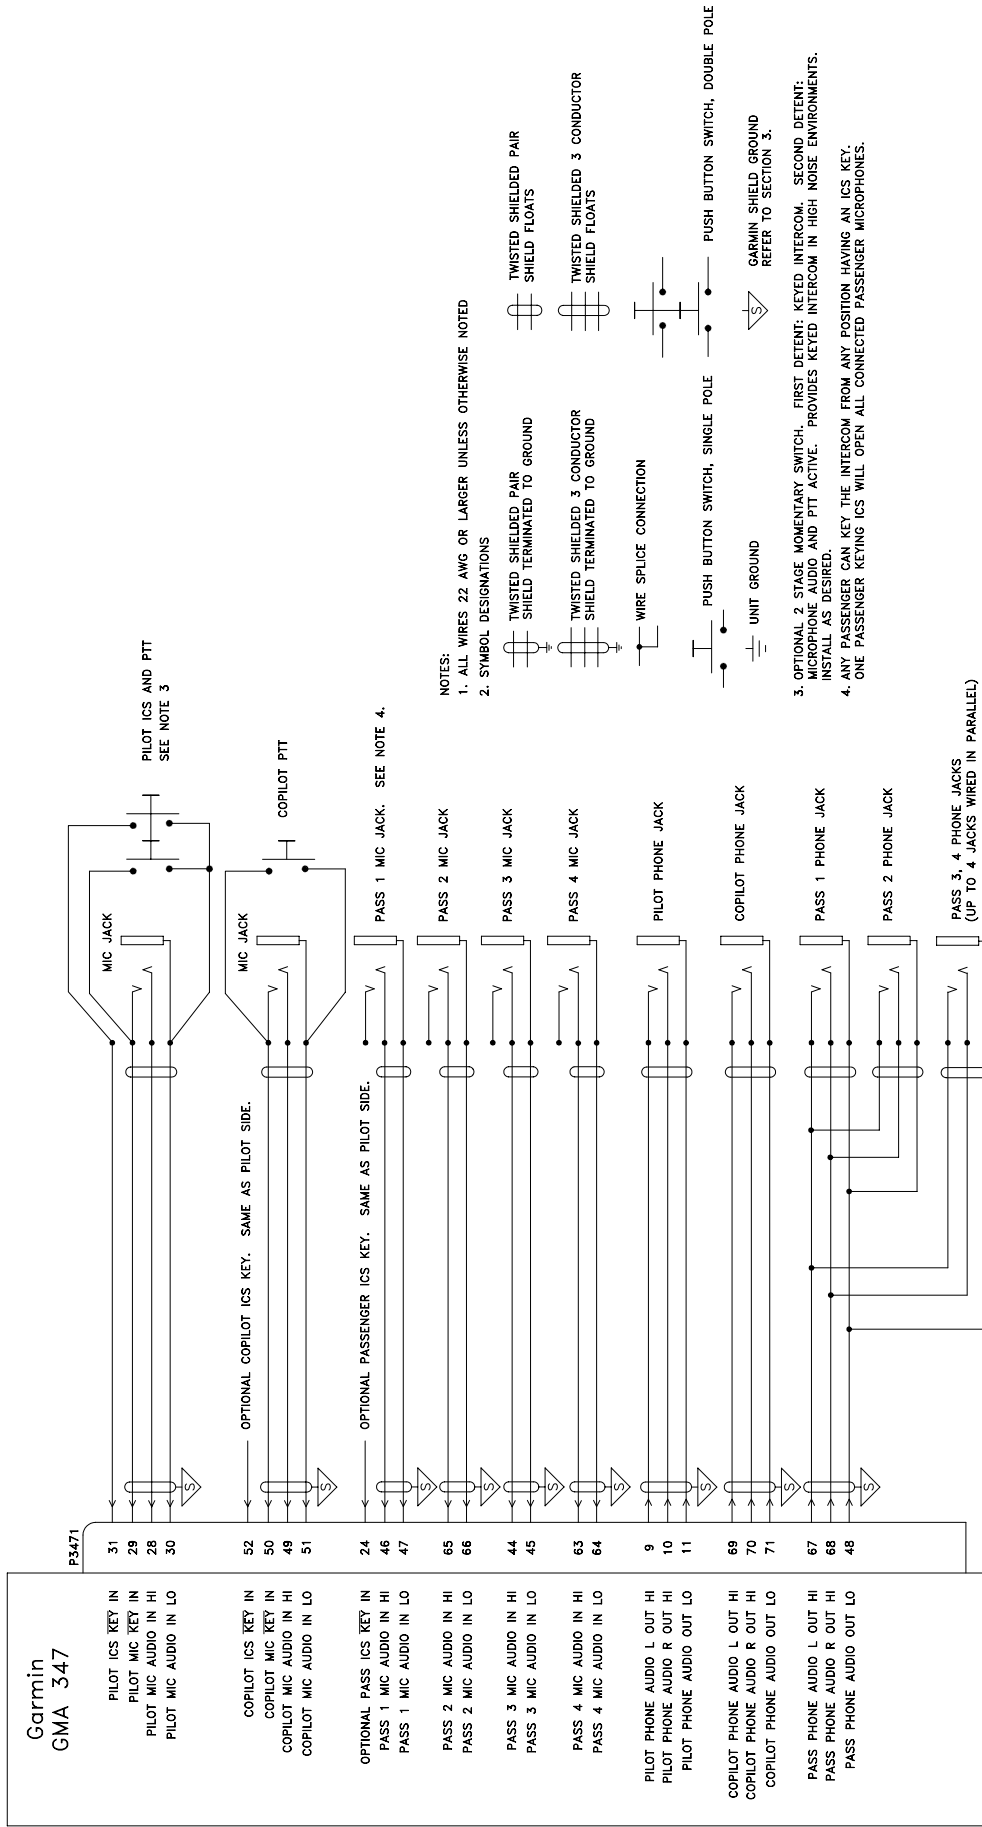


Figure C-2. Mic and Phone Jack Connections, Interconnect Wiring Diagram

APPENDIX C INTERCONNECT DRAWINGS

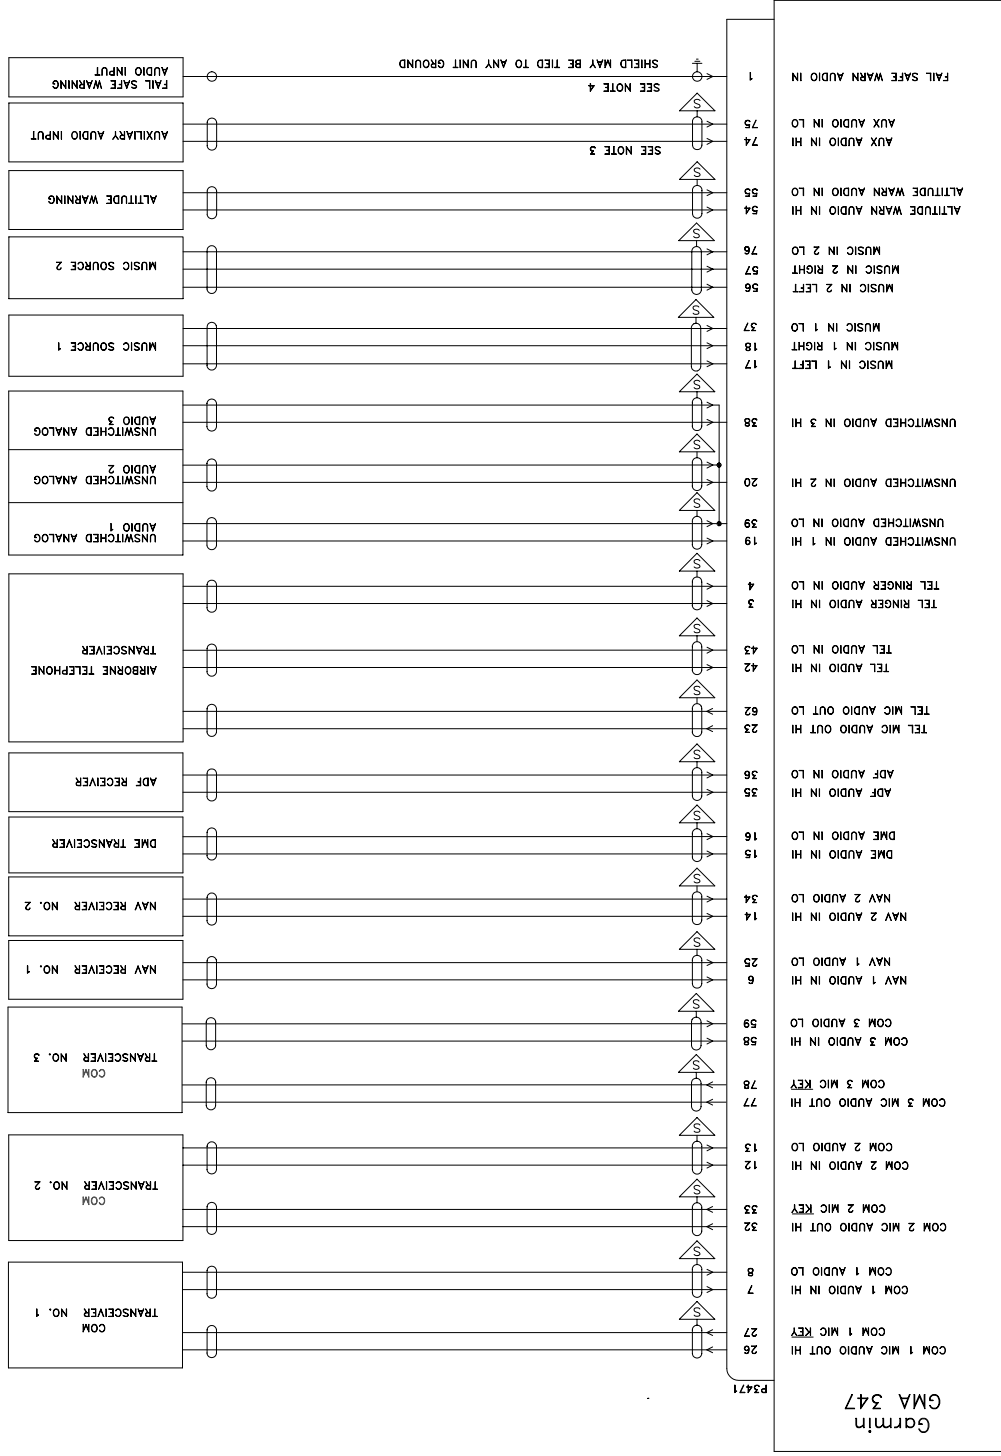

GMA 347
Garmin

P3471

SHIELD MAY BE TIED TO ANY UNIT GROUND

SEE NOTE 4

SEE NOTE 3



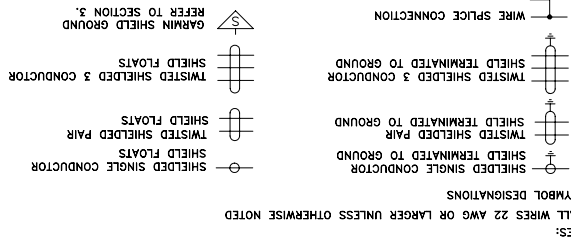


Figure C-3. Transceiver Analog Connections, Interconnect Wiring Diagram

APPENDIX C INTERCONNECT DRAWINGS

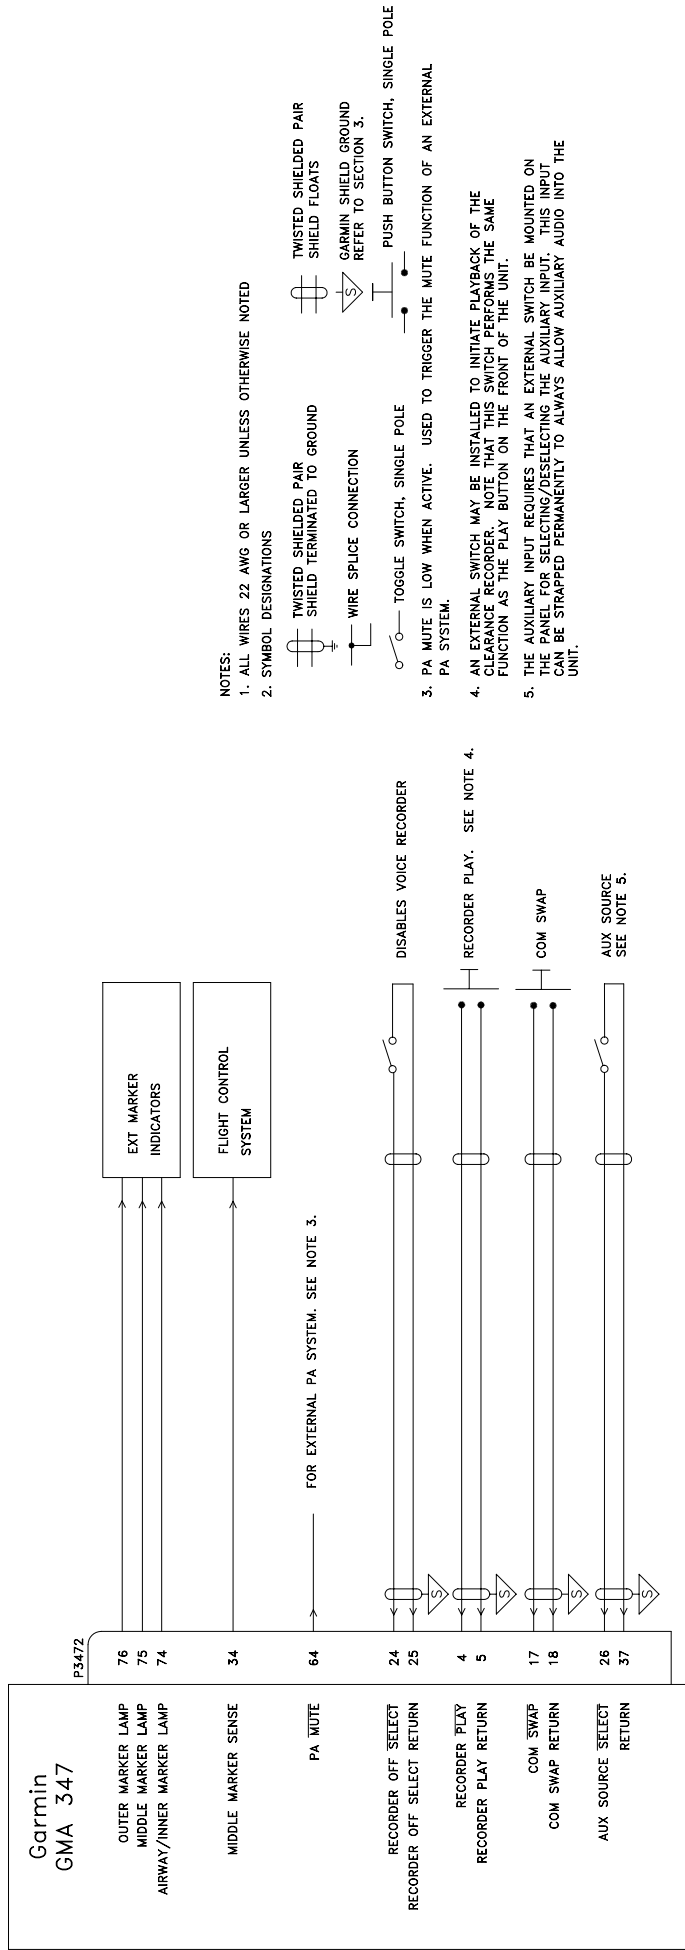

- NOTES:
 1. ALL WIRES 22 AWG OR LARGER UNLESS OTHERWISE NOTED
 2. SYMBOL DESIGNATIONS

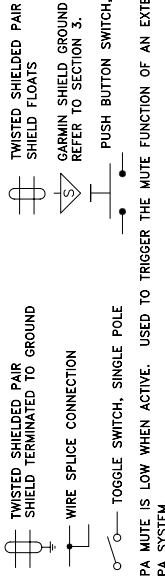

3. PA MUTE IS LOW WHEN ACTIVE. USED TO TRIGGER THE MUTE FUNCTION OF AN EXTERNAL PA SYSTEM.
 4. AN EXTERNAL SWITCH MAY BE INSTALLED TO INITIATE PLAYBACK OF THE CLEARANCE RECORDER. NOTE THAT THIS SWITCH PERFORMS THE SAME FUNCTION AS THE PLAY BUTTON ON THE FRONT OF THE UNIT.
 5. THE AUXILIARY INPUT REQUIRES THAT AN EXTERNAL SWITCH BE MOUNTED ON THE PANEL FOR SELECTING/DESELECTING THE AUXILIARY INPUT. THIS INPUT CAN BE STRAPPED PERMANENTLY TO ALWAYS ALLOW AUXILIARY AUDIO INTO THE UNIT.

Figure C-4. Discrete Lines, Interconnect Wiring Diagram

GMA 340 vs GMA 347

Refer to the pinouts below when updating an installation from a GMA 340 to a GMA 347.

| GMA 340 | | | GMA 347 | | |
|---------|-------|---------------------------|----------|----------|---------------------------|
| Conn. | Pin # | Description | Conn. | Pin # | Description |
| J1 | 1 | | J3472 | 78 | Mic Ant |
| J1 | 2 | Mic Ant Return | J3472 | 59 | Mic Ant Return |
| J1 | 3 | Com 3 In | J3471 | 58 | Com 3 In |
| J1 | 4 | Com 3 Return | J3471 | 59 | Com 3 Return |
| J1 | 5 | Com 3 Mic | J3471 | 77 | Com 3 Mic |
| J1 | 6 | Com 3 Key* | J3471 | 78 | Com 3 Key* |
| J1 | 7 | ADF In (ADF 2 In) | J3471 | 35 | ADF In (ADF 2 In) |
| J1 | 8 | ADF Return (ADF 2 Return) | J3471 | 36 | ADF Return (ADF 2 Return) |
| J1 | 9 | Com 1 In | J3471 | 7 | Com 1 In |
| J1 | 10 | Com 1 Return | J3471 | 8 | Com 1 Return |
| J1 | 11 | Com 1 Mic | J3471 | 26 | Com 1 Mic |
| J1 | 12 | Com 1 Key* | J3471 | 27 | Com 1 Key* |
| J1 | 13 | Com 2 In | J3471 | 12 | Com 2 In |
| J1 | 14 | Com 2 Return | J3471 | 13 | Com 2 Return |
| J1 | 15 | Com 2 Mic | J3471 | 32 | Com 2 Mic |
| J1 | 16 | MASQ InH* | J3472 | 2 | MASQ InH* |
| J1 | 17 | Nav 1 In | J3471 | 6 | Nav 1 In |
| J1 | 18 | Nav 1 Return | J3471 | 25 | Nav 1 Return |
| J1 | 19 | Nav 2 In | J3471 | 14 | Nav 2 In |
| J1 | 20 | Nav 2 Return | J3471 | 34 | Nav 2 Return |
| J1 | 21 | DME In (ADF 1 In) | J3471 | 15 | DME In (ADF 1 In) |
| J1 | 22 | DME Return (ADF 1 Return) | J3471 | 16 | DME Return (ADF 1 Return) |
| J1 | 23 | Com 3 Spkr Load | (Note 1) | (Note 1) | Com 3 Spkr Load |
| J1 | 24 | Com 3 Spkr Load Return | (Note 1) | (Note 1) | Com 3 Spkr Load Return |
| J1 | 25 | Com 1 Spkr Load | (Note 1) | (Note 1) | Com 1 Spkr Load |
| J1 | 26 | Com 1 Spkr Load Return | (Note 1) | (Note 1) | Com 1 Spkr Load Return |
| J1 | 27 | Com 2 Spkr Load | (Note 1) | (Note 1) | Com 2 Spkr Load |
| J1 | 28 | Com 2 Spkr Load Return | (Note 1) | (Note 1) | Com 2 Spkr Load Return |
| J1 | 29 | NC | NC | NC | NC |
| J1 | 30 | Com 2 Key* | J3471 | 33 | Com 2 Key* |
| J1 | 31 | Alt Wm In | J3471 | 54 | Alt Wm In |
| J1 | 32 | Alt Wm Return | J3471 | 55 | Alt Wm Return |
| J1 | 33 | Pilot Mic In | J3471 | 28 | Pilot Mic In |
| J1 | 34 | Pilot Mic Key* | J3471 | 29 | Pilot Mic Key* |
| J1 | 35 | Pilot Mic Return | J3471 | 30 | Pilot Mic Return |
| J1 | 36 | Ext White Lamp; A | J3472 | 74 | Ext White Lamp; A |
| J1 | 37 | Ext Blue Lamp; O | J3472 | 76 | Ext Blue Lamp; O |
| J1 | 38 | Ext Amber Lamp; M | J3472 | 75 | Ext Amber Lamp; M |
| J1 | 39 | Middle Mic Sens | J3472 | 34 | Middle Mic Sens |
| J1 | 40 | Pass Headset L | J3471 | 67 | Pass Headset L |
| J1 | 41 | Pass Headset R | J3471 | 68 | Pass Headset R |
| J1 | 42 | Pass Headset Return | J3471 | 48 | Pass Headset Return |
| J1 | 43 | Tail Ringer Return | (Note 2) | (Note 2) | Tail Ringer Return |
| J1 | 44 | Tail Ringer In | (Note 2) | (Note 2) | Tail Ringer In |

| GMA 340 | | | GMA 347 | | |
|---------|-------|-----------------------------|----------|----------|-----------------------------|
| Conn. | Pin # | Description | Conn. | Pin # | Description |
| J2 | 1 | Pilot Headset Return | J3471 | 11 | Pilot Headset Return |
| J2 | 2 | Co-Pilot Headset Return | J3471 | 71 | Co-Pilot Headset Return |
| J2 | 3 | Co-Pilot Headset L | J3471 | 69 | Co-Pilot Headset L |
| J2 | 4 | Co-Pilot Headset R | J3471 | 70 | Co-Pilot Headset R |
| J2 | 5 | 14V Lgt. Lz/28V Lgt. Lo | (Note 3) | (Note 3) | 14V Lgt. Lz/28V Lgt. Lo |
| J2 | 6 | 14V Lgt.28V Lgt. Lo | (Note 3) | (Note 3) | 14V Lgt.28V Lgt. Lo |
| J2 | 7 | 14V Lgt.28V Lgt. | (Note 3) | (Note 3) | 14V Lgt.28V Lgt. |
| J2 | 8 | Aircraft Power | J3472 | 53 | Aircraft Power |
| J2 | 9 | Aircraft Power | J3472 | 55 | Aircraft Power |
| J2 | 10 | Aircraft Ground | J3472 | 14 | Aircraft Ground |
| J2 | 11 | Aircraft Ground | J3472 | 16 | Aircraft Ground |
| J2 | 12 | PA Mute* | J3472 | 64 | PA Mute* |
| J2 | 13 | ICS Mute Inhibit* | J3472 | 66 | ICS Mute Inhibit* |
| J2 | 14 | ICS Mute Inhibit Return | J3472 | 67 | ICS Mute Inhibit Return |
| J2 | 15 | High Music Gain Select* | (Note 4) | (Note 4) | High Music Gain Select* |
| J2 | 16 | Pilot Headset L | J3471 | 9 | Pilot Headset L |
| J2 | 17 | 8 Ohm Select* | (Note 5) | (Note 5) | 8 Ohm Select* |
| J2 | 18 | Reserved | NC | NC | Reserved |
| J2 | 19 | Tone Enable* | (Note 6) | (Note 6) | Tone Enable* |
| J2 | 20 | Swap* | J3472 | 17 | Swap* |
| J2 | 21 | Swap Return | J3472 | 18 | Swap Return |
| J2 | 22 | NC | NC | NC | NC |
| J2 | 23 | Music 1 L In | J3471 | 17 | Music 1 L In |
| J2 | 24 | Music 1 R In | J3471 | 18 | Music 1 R In |
| J2 | 25 | Music 1 Return | J3471 | 37 | Music 1 Return |
| J2 | 26 | Music 2 L In (NC) | J3471 | 56 | Music 2 L In (NC) |
| J2 | 27 | Music 2 R In (DME In) | J3471 | 57 | Music 2 R In (DME In) |
| J2 | 28 | Music 2 Return (DME Return) | J3471 | 76 | Music 2 Return (DME Return) |
| J2 | 29 | FAILSAFE_WARN | J3471 | 1 | FAILSAFE_WARN |
| J2 | 30 | Com TX Mute* | J3472 | 43 | Com TX Mute* |
| J2 | 31 | Pilot Headset R | J3471 | 10 | Pilot Headset R |
| J2 | 32 | Co-Pilot Mic In | J3471 | 49 | Co-Pilot Mic In |
| J2 | 33 | Co-Pilot Mic Key* | J3471 | 50 | Co-Pilot Mic Key* |
| J2 | 34 | Co-Pilot Mic Return | J3471 | 51 | Co-Pilot Mic Return |
| J2 | 35 | Pass 1 Mic | J3471 | 46 | Pass 1 Mic |
| J2 | 36 | Pass 1 Mic Return | J3471 | 47 | Pass 1 Mic Return |
| J2 | 37 | Pass 2 Mic | J3471 | 66 | Pass 2 Mic |
| J2 | 38 | Pass 2 Mic Return | J3471 | 66 | Pass 2 Mic Return |
| J2 | 39 | Pass 3 Mic | J3471 | 44 | Pass 3 Mic |
| J2 | 40 | Pass 3 Mic Return | J3471 | 45 | Pass 3 Mic Return |
| J2 | 41 | Pass 4 Mic | J3471 | 63 | Pass 4 Mic |
| J2 | 42 | Pass 4 Mic Return | J3471 | 64 | Pass 4 Mic Return |
| J2 | 43 | Spkr Return | J3472 | 41 | Spkr Return |
| J2 | 44 | Spkr Out | J3472 | 42 | Spkr Out |

NOTES:

1. COM Speaker leads are not supported on the GMA 347.
2. The GMA 347 supports a full duplex telephone interface.
3. For the GMA 347, connect the lighting bus as shown in the following table:

| Voltage | High Side Bus | Low Side Bus |
|--------------|---------------|--------------|
| 28V lighting | J3472, pin 52 | NC |
| 14V lighting | J3472, pin 51 | NC |

Note that the bus signal is only used as a reference voltage. The unit does not draw power from the bus.

4. There is no music gain select for the GMA 347. The music volume is adjusted via the GMA 347 configuration program.
5. There is no 8 ohm select for the GMA 347. The unit will drive either a 4 or 8 ohm load.
6. There is no tone enable for the GMA 347. There is currently no way to disable the keypress tones.

Figure C-5. GMA 340 to GMA 347 Comparison